
bürkert
FLUID CONTROL SYSTEMS

# Type 3280, 3285

Electromotive operated proportional valve
Elektromotorisch betätigtes Proportionalventil
Vanne proportionnelle électromotrisé

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026

valvesgo

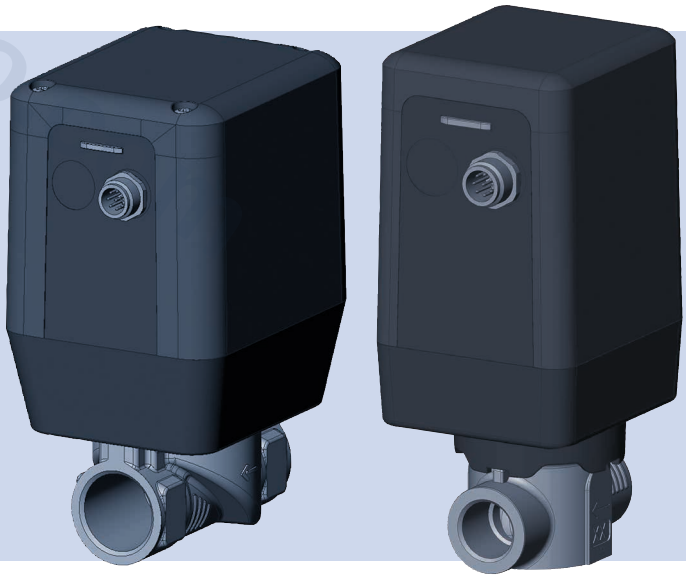

## Operating Instructions

valvesgo.com

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026

valvesgo.com

We reserve the right to make technical changes without notice.
Technische Änderungen vorbehalten.
Sous réserve de modifications techniques.

© 2015-2026 Bürkert Werke GmbH & Co. KG

Operating Instructions 2606/12_EU-ML_00810387 / Original DE

# Contents


1 OPERATING INSTRUCTIONS ..... 6

1.1 Symbols ..... 6

1.2 Definition of terms ..... 6

2 AUTHORIZED USE ..... 7

3 BASIC SAFETY INSTRUCTIONS ..... 8

4 GENERAL INFORMATION ..... 9

4.1 Contact address ..... 9

4.2 Warranty ..... 9

4.3 Information on the Internet ..... 9

5 PRODUCT DESCRIPTION ..... 10

5.1 Intended use ..... 10

5.2 Properties ..... 10

5.3 Structure and function ..... 11

5.3.1 Electromotive seat valve Type 3280 ..... 11

5.3.2 Electromotive disk valve Type 3285 ..... 11

5.4 Device versions ..... 12

5.4.1 Electric control ..... 12

6 TECHNICAL DATA ..... 15

6.1 Standards and directives ..... 15

6.2 Operating conditions ..... 15

6.3 Type label ..... 15

6.4 Mechanical data ..... 16

6.5 Electrical data ..... 17

6.5.1 Derating ..... 19

6.6 Fluidic data ..... 20


MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026

valvesgo.com



valvesgo.com

7 INSTALLATION ..... 21
7.1 Installing device fluidically ..... 21
7.1.1 Installation area for cartridge body ..... 22
7.1.2 Installation of the proportional valve with cartridge body ..... 24
7.2 Installing device electrically ..... 25
7.2.1 Pin assignment for the on-off valve, circular connector M12, 8-pole ..... 26
7.2.2 Pin assignment for the control valve, circular connector M12, 8-pole ..... 26
7.2.3 Pin assignment for the positioner ..... 27
7.2.4 Pin assignment for process controller ..... 28
7.3 DIP switch settings (analog version only) ..... 29
7.3.1 Opening the actuator cover ..... 30
7.3.2 Setting the DIP switch ..... 31
7.3.3 Closing the actuator cover ..... 33
7.4 Accepting and saving SIM card data (digital version only) ..... 34
7.5 LED display ..... 35
7.5.1 Display elements standard ..... 35
7.5.2 Display elements NAMUR NE 107 ..... 36

8 START-UP ..... 37
8.1 Functions of the standard device ..... 37
8.2 Functions of the positioner and process controller version ..... 38
8.3 Setting options ..... 40
8.3.1 Setting options for running positioner and process controller ..... 40
8.3.2 Setting options for running process controller ..... 44
8.3.3 Other settings ..... 46
8.4 Configuration management ..... 46

9 MAINTENANCE, TROUBLESHOOTING ..... 47
9.1 Maintenance ..... 47
9.2 Cleaning ..... 47
9.3 Troubleshooting ..... 47

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026

valvesgo.com



valvesgo.com

10 SPARE PARTS ..... 49
10.1 Accessories ..... 49
11 PACKAGING AND TRANSPORT ..... 50
12 STORAGE ..... 50
13 ENVIRONMENTALLY FRIENDLY DISPOSAL ..... 50

valvesgo.com

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com

# 1 OPERATING INSTRUCTIONS

The operating instructions describe the entire life cycle of the device. Keep these instructions in a location which is easily accessible to every user, and make these instructions available to every new owner of the device.

**Important safety information.**

- Read the operating instructions carefully and thoroughly.
- Study in particular the chapters entitled “Basic safety instructions” and “Authorized use”.
- The operating instructions must be read and understood.

## 1.1 Symbols

**DANGER!**

**Warns of an immediate danger.**

- Failure to observe the warning may result in a fatal or serious injury.

**WARNING!**

**Warns of a potentially dangerous situation.**

- Failure to observe the warning may result in serious injuries or death.

**CAUTION!**

**Warns of a possible danger.**

- Failure to observe this warning may result in a moderate or minor injury.

**NOTE!**

**Warns of damage to property.**

- Failure to observe the warning may result in damage to the device or the equipment.

Indicates important additional information, tips and recommendations.

Refers to information in these operating instructions or in other documentation.

- designates instructions for risk prevention.

→ Designates a procedure which you must carry out.

## 1.2 Definition of terms

In these instructions the term "device" always refers to the electromotive operated proportional valve Type 3280 and 3285.

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com

# 2 AUTHORIZED USE

The electromotive operated proportional valve Type 3280 and 3285 is designed to control the flow of liquid and gaseous media.

- Use the device only as intended. Non-intended use of the device may be dangerous to people, nearby equipment and the environment.
- Do not use the device outdoors and keep it away from heat sources that could cause the permissible temperature range to be exceeded.
- Protect the device from direct sunlight and humidity.
- To use the device, observe the permissible data, operating conditions and conditions of use. These specifications can be found in the contract documents, the operating instructions and on the Type label.
- Use the device only in conjunction with third-party devices and components recommended or approved by Bürkert.
- The device must only be used in perfect working order; always ensure proper storage, transportation, installation and operation.

valvesgo.com

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com

# 3 BASIC SAFETY INSTRUCTIONS

These safety instructions do not take into account any unforeseen circumstances and events which occur during installation, operation and maintenance. The operator is responsible for observing the location-specific safety regulations, also with reference to personnel.

**Risk of injury from high pressure.**

- Before loosening lines and valves, cut off the pressure and deaerate or drain lines.

**Risk of injury due to electrical shock.**

- Before working on the system or device, switch off and isolate the power supply to prevent reactivation of the device.
- Observe applicable accident prevention and safety regulations for electrical equipment.

**Risk of burns or risk of fire if used for a prolonged duty cycle through hot device surface.**

- Keep the device away from highly flammable substances and medium and do not touch with bare hands.

**General hazardous situations.**

To prevent injuries:

- Do not use Type 3280 and 3285 in potentially explosive areas.
- Do not subject the actuator housing and actuator cover to mechanical loading.
- Do not make any internal or external modifications on the device. Do not paint housing parts or screws.
- Avoid using the proportional valve in the vicinity of strong magnetic fields.
- Secure the device from unintentional actuation.
- Only trained technicians may perform installation and maintenance work.
- After an interruption in the power supply, ensure that the process is restarted in a defined or controlled manner.
- Observe the general rules of technology.

**NOTE!**

**Electrostatic sensitive components and modules!**

The device contains electronic components which react sensitively to electrostatic discharge (ESD). Contact with electrostatically charged persons or objects are hazardous to these components. In the worst case scenario, they will be destroyed immediately or will fail when energized.

- Observe the requirements in accordance with EN 61340-5-1 to minimize or avoid the possibility of damage caused by sudden electrostatic discharge!
- Do not touch electronic components while the supply voltage is switched on!

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com

# 4 GENERAL INFORMATION

## 4.1 Contact address

**Germany**

Bürkert Fluid Control Systems
Sales Center
Christian-Bürkert-Str. 13-17
D-74653 Ingelfingen
Tel. + 49 (0) 7940 - 10 91 111
Fax + 49 (0) 7940 - 10 91 448
E-mail: info@burkert.com

**International**

You can find information on the Internet under:

www.burkert.com

## 4.2 Warranty

The warranty is only valid if the proportional valve Type 3280 and 3285 is used correctly in accordance with the specified operating conditions.

## 4.3 Information on the Internet

The operating instructions and data sheets for Types 3280 and 3285 can be found on the Internet at:

www.burkert.com

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026

valvesgo.com



valvesgo.com

# 5 PRODUCT DESCRIPTION

## 5.1 Intended use

The proportional valve Type 3280 and 3285 is designed for controlling the flow rate of liquid and gaseous media. Only clean, liquid or gaseous medium, which does not react with the bodies and sealing materials, may be controlled.

**NOTE!**

**Unsuitable medium will damage the body and the seals.**

Unsuitable medium may damage the body and the seals.

- ▸ Use suitable medium only.
- ▸ Check chemical compatibility in individual cases.

## 5.2 Properties

The regulation of the flow or switching of the valve is regulated with the aid of a stepper motor actuator which is controlled by the integrated electronic control system. Therefore, no external motor control is required for step control.

**Basic functions of the control electronics:**

- Control of the valve opening by processing the external set-point values
- Output of the valve states via the LED display
- Position detection after power failure

- if power fails, the current position of the valve is retained
- when power is restored, the internal control electronics automatically detects it's current position

- Reduction in the energy consumption

- The valve is designed to hold its position without the active use of the motor. As soon as the desired position is achieved, motor is turned off and the valve uses only fraction of power required to move the valve.

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com

# 5.3 Structure and function

## 5.3.1 Electromotive seat valve Type 3280

The valve spindle is driven by a stepper motor. The angular movement of the motor is converted to translational movement with the aid of a threaded spindle. The valve spindle is connected rigidly to the threaded spindle. The valve spindle is connected to a control cone.

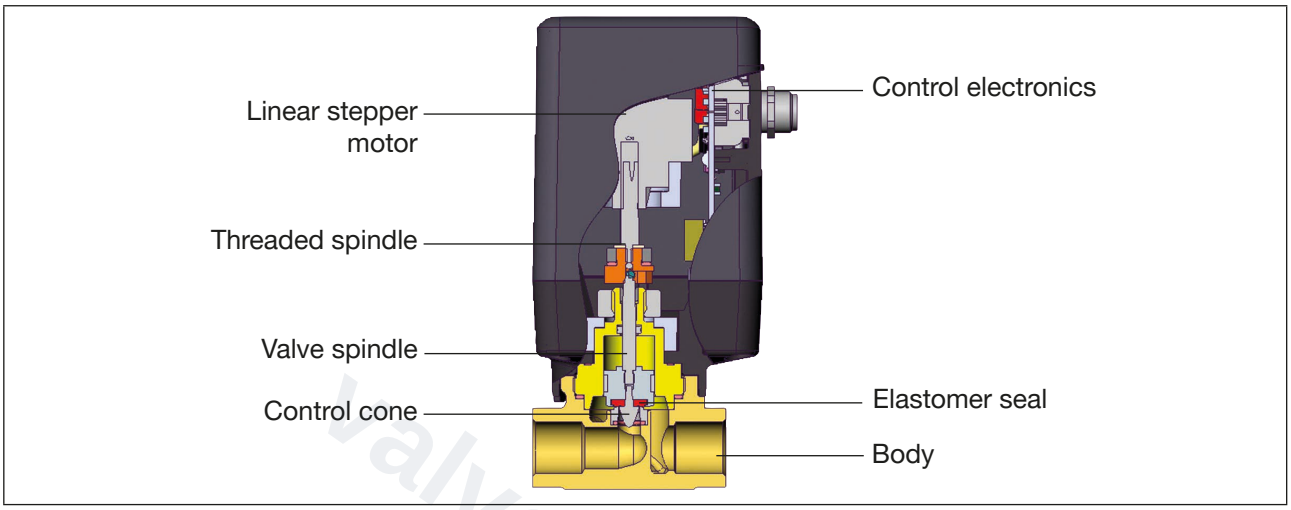



*Fig. 1: Electromotive seat valve Type 3280*

## 5.3.2 Electromotive disk valve Type 3285

The disk valve consists of a stepper motor with gearbox which transfers the rotational torque to the actuator shaft via coupling. The actuator shaft has control/shut-off disc attached to it. A fixed disk with a mouth attached to the body is used as a valve seat. Control/shut-off disc is pressed onto the fixed disk by a supporting spring. The actuator turns the control/shut-off disc about 180° above the fixes disc and opens or closes the valve seat.

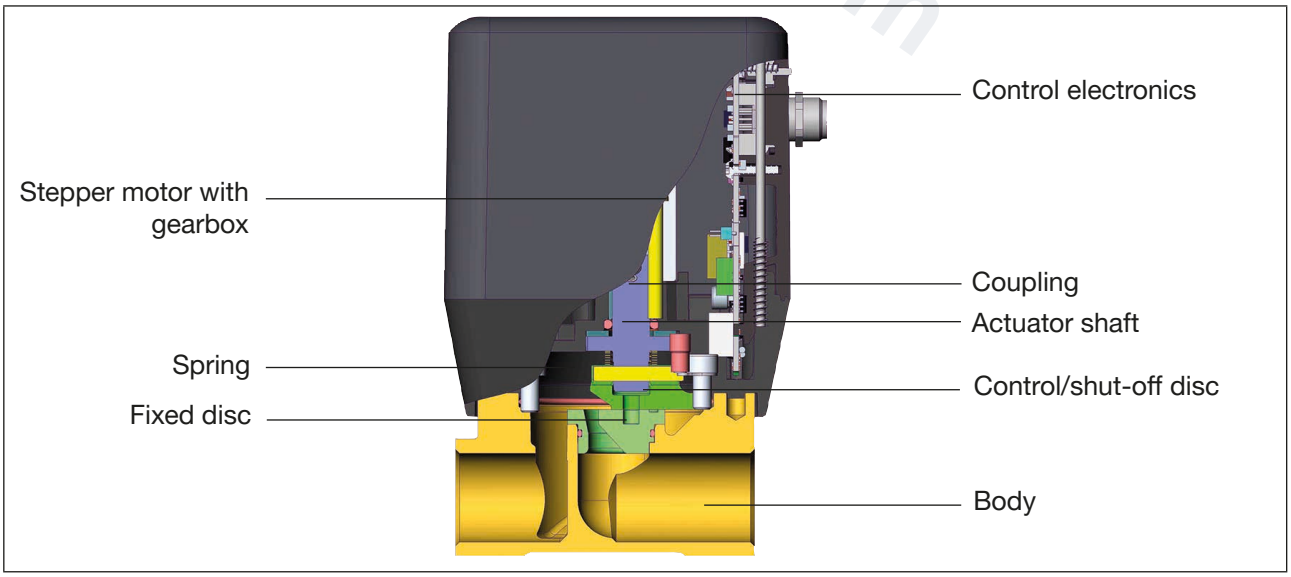



*Fig. 2: Electromotive disk valve Type 3285*

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com

## 5.4 Device versions

| Type | Descriptions | Seat diameter | Version | |
|---|---|---|---|---|
| 3280 | Electromotive 2-way seat valve | 1, 1.5, 2, 3, 4, 5, 6, 8, 10 | Standard: | • On-Off<br>• Control valve |
| 3285 | Electromotive 2-way disc valve | 8, 10, 12, 15, 20, 25 | Positioner: | • Analog<br>• Digital (Fieldbus) |
| | | | Process controller: | • Analog<br>• Digital (Fieldbus) |

There are 2 versions of the positioner and the process controller:
- Analog: Set-point values are transmitted in analog mode via the standard signals,
- Digital: Set-point values are transmitted in digital mode via CANopen/büS.
The versions can be identified on the connector diagram. For this, see chapter “7.2”.

### 5.4.1 Electric control

The proportional valves 3280 and 3285 feature an electromotive actuator with an electric control.

The device version is stated on the type label: G means on-off, 0 resp. H means control valve, C means positioner and D stands for process controller.

**Standard device:**

- On-Off: By processing the external set-point values the valve is switching.
- Control valve: The device converts a external standard signal, set-point position to a valve position.

Both valve end positions are indicated by the LED status. Additionally, the digital output indicates when the closed valve position has been achieved.

**Positioner:**

The position controller version converts a set-point position to a valve position. The position of the actuator is controlled according to the position set-point value. The current position *(POS)* of the electromotive valve is recorded by the position measuring system. The position controller compares this position actual value to the set-point value *(CMD)* specified as the standard signal. In case of a control difference (Xd1), the motor control signal is sent to the actuating drive as the actuating variable. Z1 is a disturbance value.

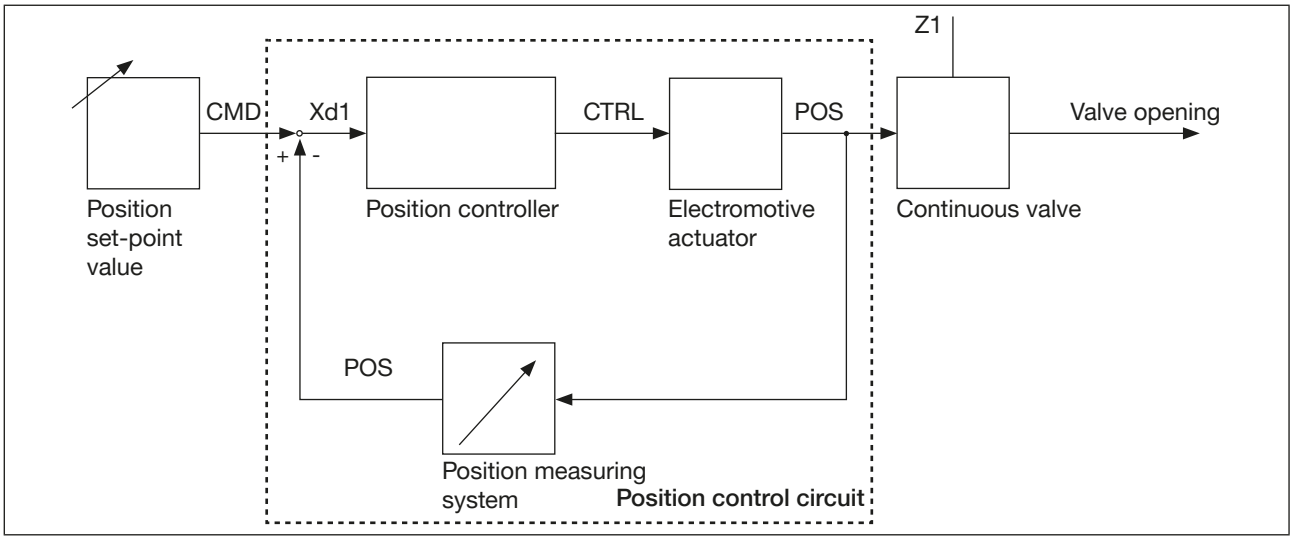



*Fig. 3: Signal flow diagram position controller*

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com

Both valve end positions are indicated by the LED status. Moreover, the position actual value recorded using the position measuring system is output via the M12 circular plug-in connector.

It is possible to communicate with the device digitally via CANopen* or büS**.

* CANopen - A CAN-based fieldbus (Controller Area Network) used in automation technology to link devices.

** büS - A CANopen-based fieldbus with additional functions.

The positioner version also features some special functions (see chapter “8.3.1”), which can be set up using the Bürkert Communicator.

The operating instructions for the Bürkert Communicator can be found at www.burkert.com

**Process controller:**

The additionally implemented PID controller can perform not only the actual position control but also a process control in the sense of a cascade control.

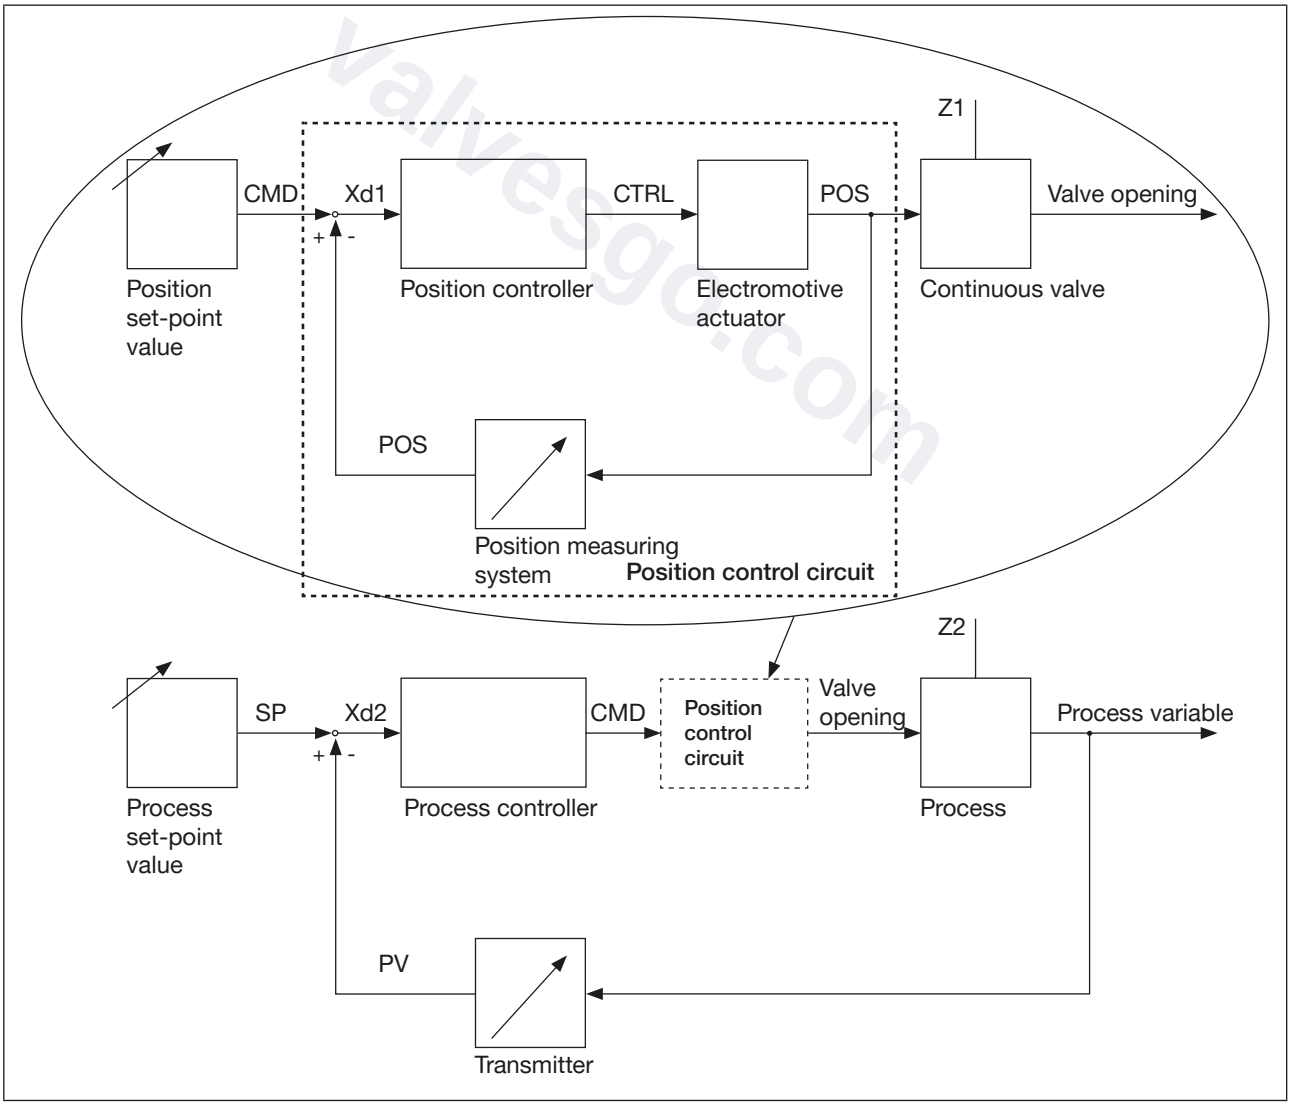



*Fig. 4: Signal flow diagram process controller*

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com

The process controller is integrated in a control circuit. The position set-point value of the valve is calculated from the process set-point value and the process actual value using the control parameters (PID controller). The process set-point value can be specified by an external signal.

During the process control the position control mentioned above becomes the subordinate auxiliary control circuit; this results in a cascade control. The process controller in the main control circuit has a PID function. The process set-point value (SP) is specified as a set-point value and is compared with the actual value (PV) of the process variable to be controlled. The position measuring system records the current position (POS) of the electromotive linear actuator. This position actual value is compared by the position controller with the set-point value (CMD) specified by the process controller. If there is a control difference (Xd1), the actual position (POS) and therefore the valve opening are changed by the control variable (CTRL). Z2 represents a disturbance variable.

It is possible to communicate with the device digitally via CANopen* or büS**.

* CANopen - A CAN-based fieldbus (Controller Area Network) used in automation technology to link devices.

** büS - A CANopen-based fieldbus with additional functions.

The positioner version also features some special functions (see chapter “8.3.1”), which can be set up using the Bürkert-Communicator.

The operating instructions for the Bürkert-Communicator can be found at www.burkert.com

valvesgo.com

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com


# 6 TECHNICAL DATA

## 6.1 Standards and directives

The device complies with the valid EU harmonisation legislation. In addition, the device also complies with the requirements of the laws of the United Kingdom.
The harmonised standards that have been applied for the conformity assessment procedure are listed in the current version of the EU Declaration of Conformity/ UK Declaration of Conformity.

## 6.2 Operating conditions

| | |
|---|---|
| Ambient temperature | -10...+60 °C (observe derating curve, see chapter "6.5.1")<br>-10...+50 °C Type 3280, Seat diameter 8...10, positioner and process controller restricted |
| Medium temperature | 0...+70 °C |
| Medium temperature for oxygen | 0...+60 °C |
| Air humidity | < 95 %, non-condensing |
| Medium | non-aggressive, clean and non-corrosive liquid and gaseous medium which do not attack the bodies and sealing materials. Check resistance in individual cases (see chemical resistance chart at www.burkert.com).<br>If medium is contaminated or contain particals, connect a suitable dirt filter upstream. |
| Control functions | Depending on the version, the seat of the valve is closed with or against the medium flow:<br>Type 3280: flow direction under seat<br>Type 3285: flow direction over seat |

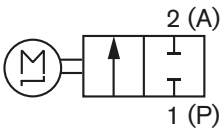


2-way valve for continuous control of the flow rate in output A, motorized, without power motionless

## 6.3 Type label

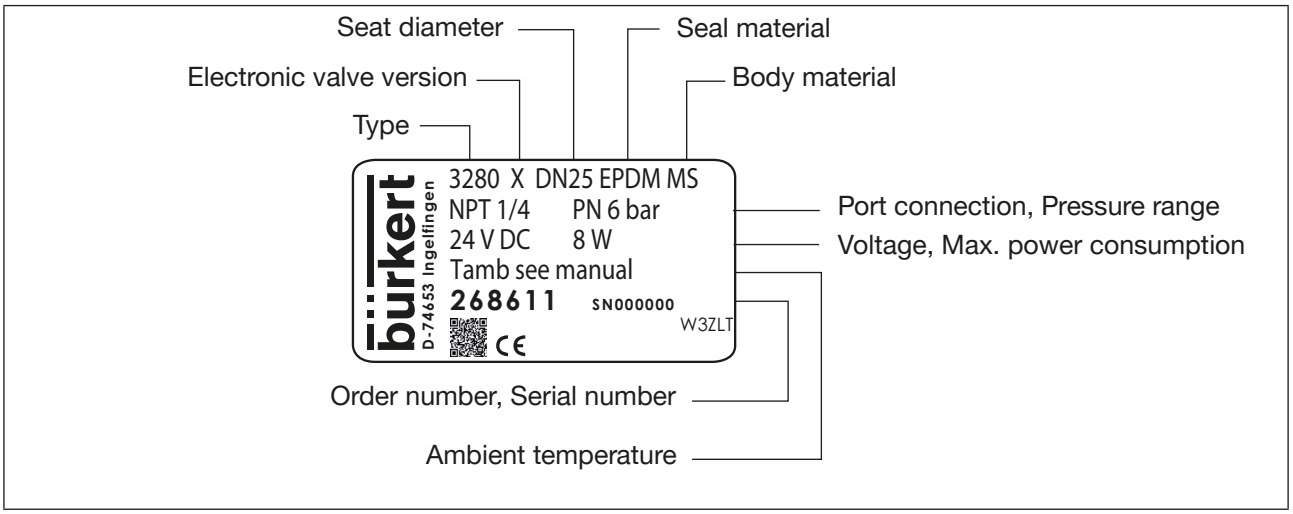



*Fig. 5: Description of the type label (Example)*

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com

## 6.4 Mechanical data

| Materials | Type 3280 | Type 3285 |
|---|---|---|
| Actuator housing | Black Plastic parts: PPS GF40,<br>Anthracite Plastic parts: PC GF10 | Black Plastic parts: PPS GF40,<br>Anthracite Plastic parts: PC GF10,<br>in contact with medium: PPS GF40 |
| Body | Brass (MS) or<br>stainless steel (VA) | Brass (MS) or<br>stainless steel (VA) |
| Sealing material | FKM, NBR or EPDM[1)] | FKM, NBR or EPDM,<br>technical ceramic |
| Other materials in the fluid area | Stainless steel (VA) | Stainless steel (VA) |

1) *For seat sizes 1 and 1.5, the seat seal is made of PEEK*

**Connections**

| | |
|---|---|
| Type 3280 | G 1/4, G 3/8, G 1/2, NPT 1/4, NPT 3/8, NPT 1/2 and Cartridge |
| Type 3285 | G 1/2, G 3/4, G 1, NPT 1/2, NPT 3/4, NPT 1, RC 1/2, RC 3/4 or RC 1 |

**Weight**

| | |
|---|---|
| Type 3280 | ~ 0.7 kg (with VA body) |
| Type 3285 | Seat diameter 8/10 ~ 0.8 kg (with VA body)<br>Seat diameter 12/15 ~ 1.2 kg (with VA body)<br>Seat diameter 20/25 ~ 1.5 kg (with VA body) |

**Dimensions** see data sheet

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026

valvesgo.com



valvesgo.com

## 6.5 Electrical data

| Electrical data | Standard | | Positioner | | Process controller | |
|---|---|---|---|---|---|---|
| | On-Off | Control valve | Analog | Digital (Fieldbus) | Analog | Digital (Fieldbus) |
| Connections | circular plug-in connector (M12 x 1, 8-pole) | | circular plug-in connector (M12 x 1, 8-pole) | circular plug-in connector (M12 x 1, 5-pole) | circular plug-in connector (M12 x 1, 8-pole and M12 x 1, 5-pole) | circular plug-in connector (M12 x 1, 5-pole and M12 x 1, 5-pole) |
| Operating voltage | 24 V DC ±10 % - residual ripple < 10 % | | 24 V DC ±10 % - residual ripple < 10 % | | 24 V DC ±10 % - residual ripple < 10 % | |
| Power consumption | Type 3280: max. 8 W, for seat diameter 8...10 and higher pressures max. 12 W | | Type 3280: max. 8 W, for seat diameter 8...10 and higher pressures max. 12 W | | Type 3280: max. 8 W, for seat diameter 8...10 and higher pressures max. 12 W | |
| | Type 3285: max. 12 W | | Type 3285: max. 12 W | | Type 3285: max. 12 W | |
| Standby power consumption | approx. 1 W | | approx. 2 W | | approx. 2 W | |
| Actuating time (0...100 %) | Type 3280: approx. 2.5 s, for setting “Valve actuating speed normal”, see chapter “7.3” | | Type 3280: approx. 2.5 s, for setting “Valve actuating speed normal”, see chapter “8.3” | | Type 3280: approx. 2.5 s, for setting “Valve actuating speed normal”, see chapter “8.3” | |
| | Type 3285: approx. 4 s, for setting “Valve actuating speed normal”, see chapter “7.3” | | Type 3285: approx. 4 s, for setting “Valve actuating speed normal”, see chapter “8.3” | | Type 3285: approx. 4 s, for setting “Valve actuating speed normal”, see chapter “8.3” | |
| Analog input (Set-point value input) | - | 4...20 mA or 0...10 V (adjustable, see chapter “7.3”) or PWM-signal (800 Hz) | 0...20 mA, 4...20 mA, 0...5 V or 0...10 V, see chapter “8.3” or PWM-signal (800 Hz) | - | 0...20 mA, 4...20 mA, 0...5 V or 0...10 V, see chapter “8.3” or PWM-signal (800 Hz) | - |
| Digital input (set-point value input) | 0...5 V = log“0“, 10...30 V = log „1“ | - | - | - | - | - |
| Analog input (actual value input) | - | - | - | - | 0...20 mA, 4...20 mA, 0...5 V or 0...10 V, see chapter „8.2.1“ | 0...20 mA, 4...20 mA, 0...5 V, 0...10 V or Frequency: Measuring range 5...2000 Hz Input resistance > 22 kΩ Input signal > 10 Vss Square waveform |

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com

| Electrical data | Standard | | Positioner | | Process controller | |
|---|---|---|---|---|---|---|
| | On-Off | Control valve | Analog | Digital (Fieldbus) | Analog | Digital (Fieldbus) |
| Input impedance for analog input | - | 60 Ω at 4...20 mA / resolution 40 µA<br>22 kΩ at 0...10 V / resolution 20 mV | 60 Ω at 0...20 mA and 4...20 mA / resolution 40 µA<br>22 kΩ at 0...5 V and 0...10 V / resolution 20 mV | - | 60 Ω at 0...20 mA and 4...20 mA / resolution 40 µA<br>22 kΩ at 0...5 V and 0...10 V / resolution 20 mV | - |
| Analog output (actual value output) | - | - | 0...20 mA, 4...20 mA, 0...5 V, 0...10 V (adjustable, see chapter "8.3") | - | 0...20 mA, 4...20 mA, 0...5 V, 0...10 V (adjustable, see chapter "8.3") | - |
| Analog output | - | - | max. current for voltage output 10 mA<br>max. load for current output 560 Ω | - | max. current for voltage output 10 mA<br>max. load for current output 560 Ω | - |
| Digital output | active, max. 100 mA current limitation, PNP, switching voltage = $U_{supply}$-1 V<br>short-circuit proof | | - | - | - | - |
| Limit switch | contactless end position detection | | - | - | - | - |
| Position measuring system | - | | non-contact, high resolution, and thus wear-free position measuring system | | non-contact, high resolution, and thus wear-free position measuring system | |
| Parameterization interface | - | | büS or CANopen[2)] | - | büS or CANopen[2)] | - |
| Communications interface | - | | - | CANopen/büS | - | CANopen/büS |
| Duty cycle | as per EN 60034-1: S3 50 %, depending on the operating conditions.<br>Observe derating curve, see chapter "6.5.1" | | as per EN 60034-1: S3 50 %, depending on the operating conditions.<br>Observe derating curve, see chapter "6.5.1" | | as per EN 60034-1: S3 50 %, depending on the operating conditions.<br>Observe derating curve, see chapter "6.5.1" | |

2) *Analog version: 3.3 V signal voltage, reliable communication is reduced as the line length and transmission rate increase.*

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com

## 6.5.1 Derating

The maximum duty cycle of the valve depends on the maximum ambient temperatures and the current required by the stepper motor.

The duty cycle does not refer to the duty cycle of the device but to the duty cycle of the motor. This is not switched on unless the valve is to move. Frequent set-point value changes will drastically increase the duty cycle of the motor.

The derating curve can be used to indicate the maximum duty cycle permissible at the corresponding ambient temperature. A lower duty cycle must be selected for high medium temperatures. By switching on the low power function a higher duty cycle can be achieved (Warning: during low power function, max medium pressure is reduced; if violated Valve will not move or malfunction).

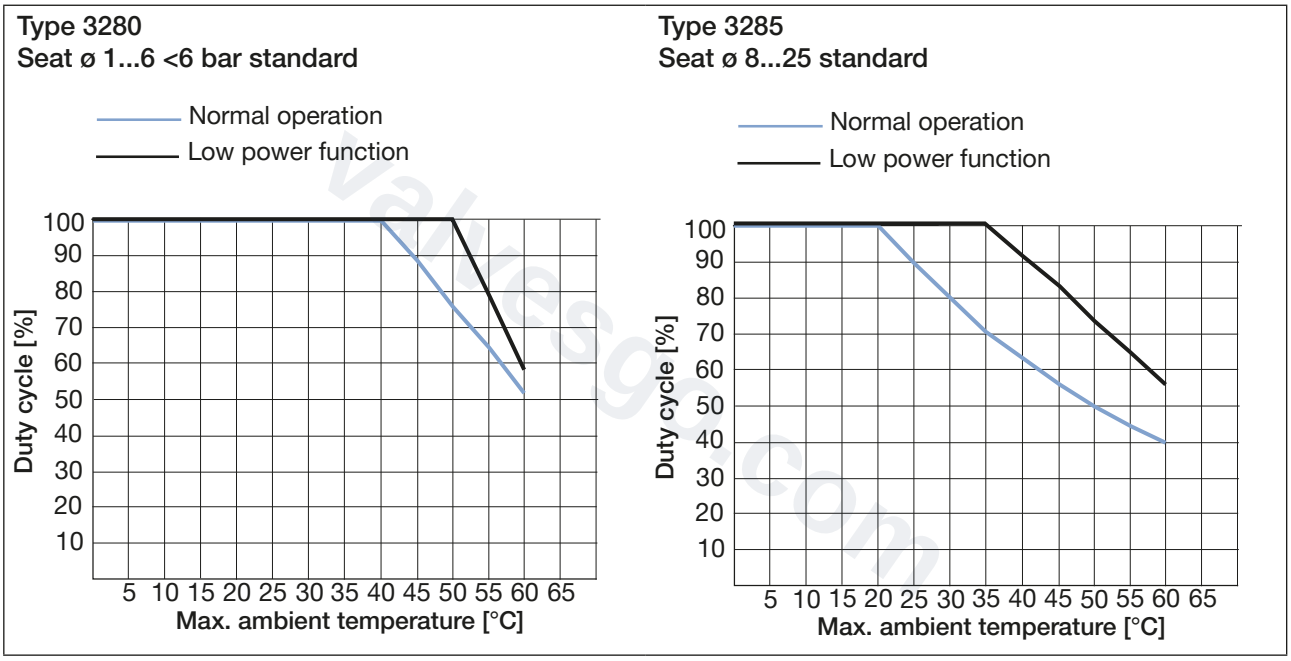



*Fig. 6: Derating curve for standard device*

valvesgo.com

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com

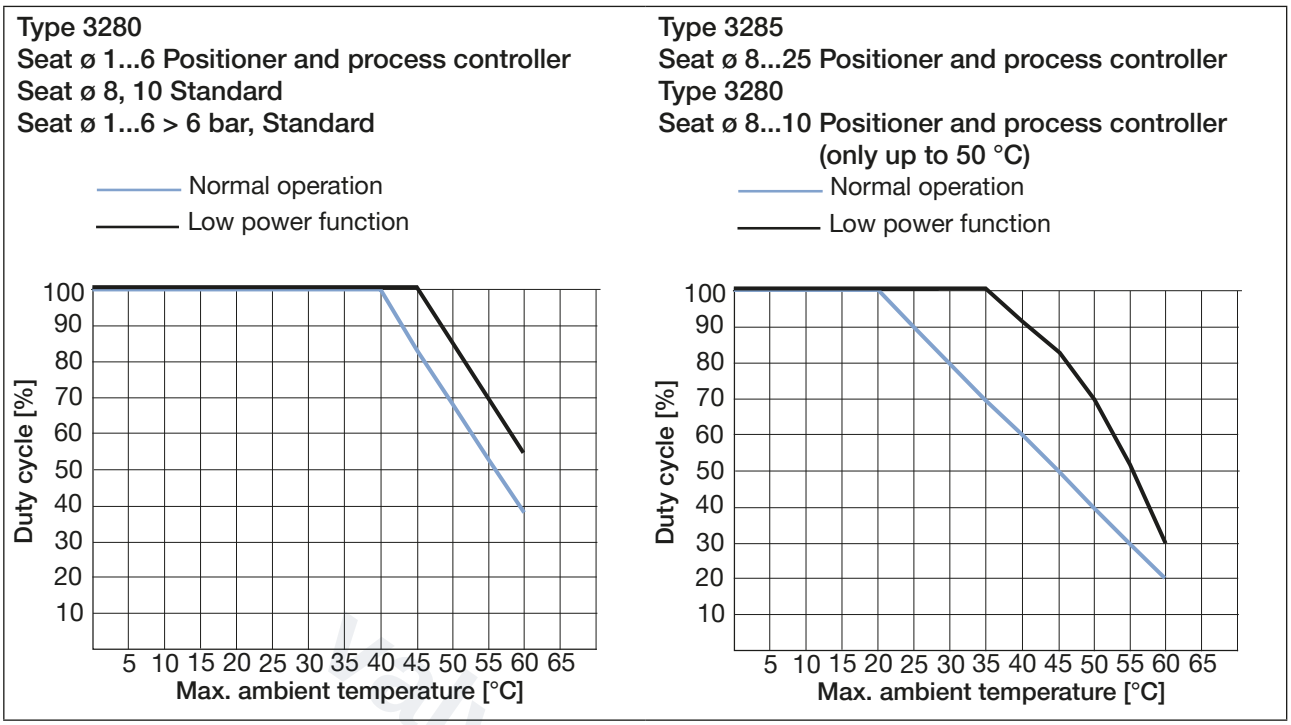



*Fig. 7: Derating curve for control positioner, process controller and standard version*

## 6.6 Fluidic data

| Type | Seat diameter | $KV_{s\ value}$ [$m^3/h$] [3] | Max. pressure [bar] |
|---|---|---|---|
| 3280 | 1 | 0.03 | See general information on the type label |
| | 1.5 | 0.065 | |
| | 2 | 0.15 | |
| | 3 | 0.3 | |
| | 4 | 0.5 | |
| | 5 | 0.7 | |
| | 6 | 0.9 | |
| | 8 | 1.5 | |
| | 10 | 1.9 | |
| 3285 | 8 | 1.8 | |
| | 10 | 2.5 | |
| | 12 | 3.9 | |
| | 15 | 5.4 | |
| | 20 | 8.1 | |
| | 25 | 9.6 | |

[3] *The $KV_{s\ value}$ is a flow rate value for water, measurement at +20 °C and 1 bar pressure difference above the fully opened valve.*

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com

# 7 INSTALLATION

**DANGER!**

**Risk of injury from high pressure in the system or device.**

- Before working on the system or device, cut off the pressure and deaerate/drain lines.

**Risk of injury due to electrical shock.**

- Before working on the system or device, switch off the power supply and secure to prevent reactivation.
- Observe applicable accident prevention and safety regulations for electrical equipment.

**WARNING!**

**Risk of injury from improper installation.**

- Installation may be carried out only by trained technicians and with the appropriate tools.
- Secure system against unintentional activation.
- Following installation, ensure a controlled or defined restart.

## 7.1 Installing device fluidically

**Installation position:** any position, preferably with actuator above and installed vertically with the actuator cover upwards

→ Clean pipelines and port connections.

→ Install a dirt filter before the valve inlet (≤ 0.3 mm for Type 3280, ≤ 0.5 mm for Type 3285).

**NOTE!**

**Caution risk of breakage.**

- Do not use plastic actuator housing as a lever arm.

→ Hold the device with a suitable tool (open-end wrench) on the body and screw into the pipeline.

→ Observe flow direction. The arrow on the body indicates the direction of flow.
Type 3280: Flow direction below seat, is always closed against the medium flow;
Type 3285: Flow direction above seat, is always closed with the medium flow.

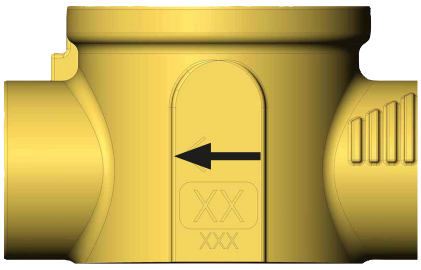



*Fig. 8: Direction of flow Type 3280, Flow direction below seat*

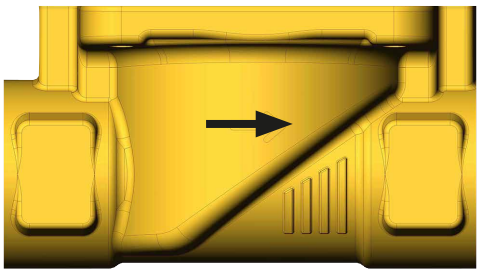


*Fig. 9: Direction of flow Type 3285, Flow direction above seat*[4)]

4) *Flow against the direction of the arrow is not permitted. Valve is not resistant to back pressure.*

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com

## 7.1.1 Installation area for cartridge body

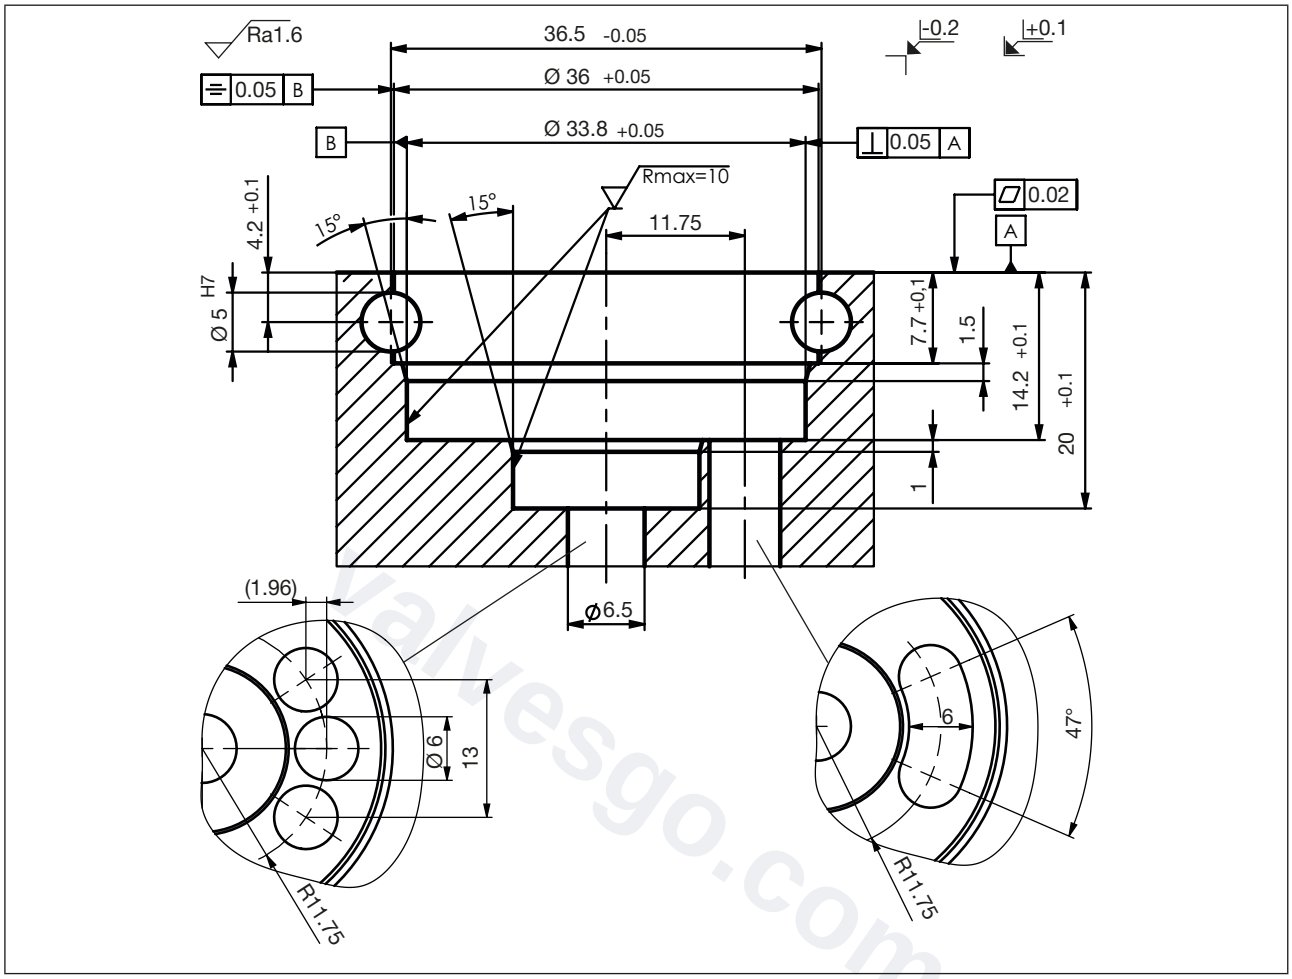



*Fig. 10: Installation area for cartridge body, seat size 1 to 6*

valvesgo.com

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com

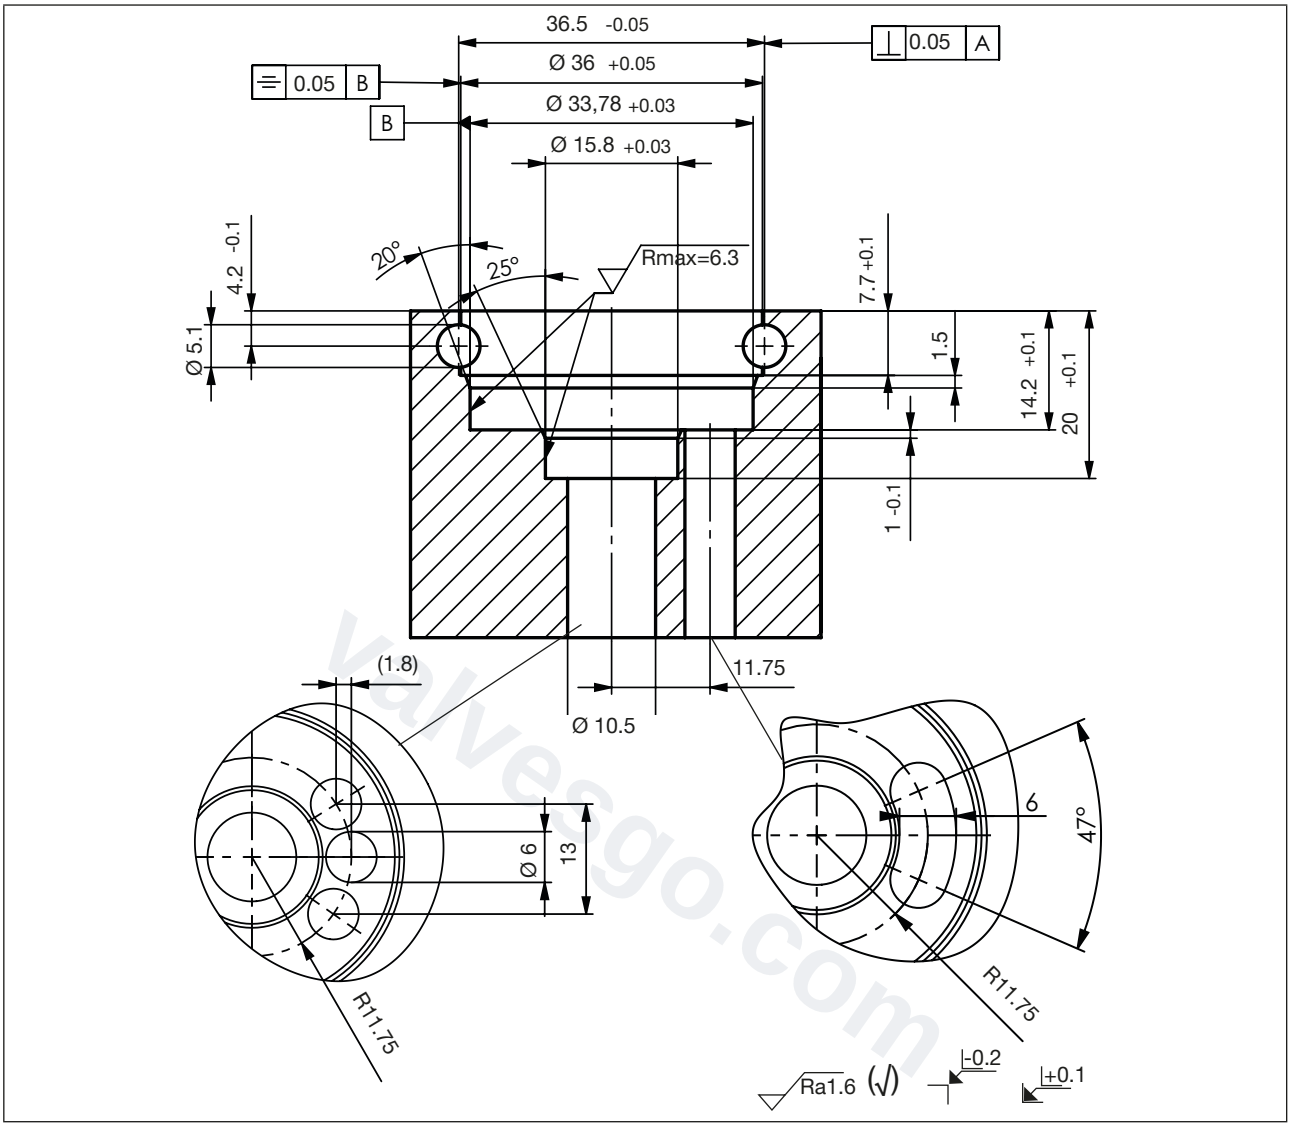



*Fig. 11: Installation area for cartridge body, seat size 8 to 10*

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com

## 7.1.2 Installation of the proportional valve with cartridge body

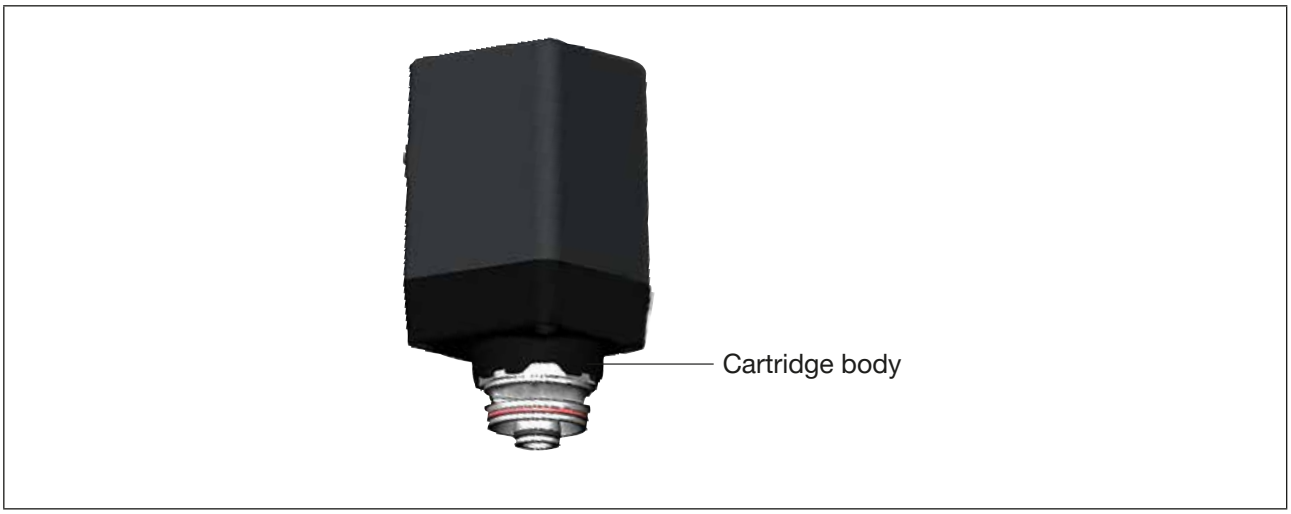



*Fig. 12: Proportional valve with cartridge body*

→ Check that the O-rings on the valve are clean.

→ Clean pipelines and flange connections.

If required, use a suitable lubricant (e.g. water) when installing the O-rings.

→ Install valve (see “Fig. 10”) and align. When installed, the valve can no longer be turned.

→ Secure the valve using suitable fastening materials, e.g. by pinning it with 2 cylinder pins or dowel pins Ø 5 mm, min. 30 mm in length.

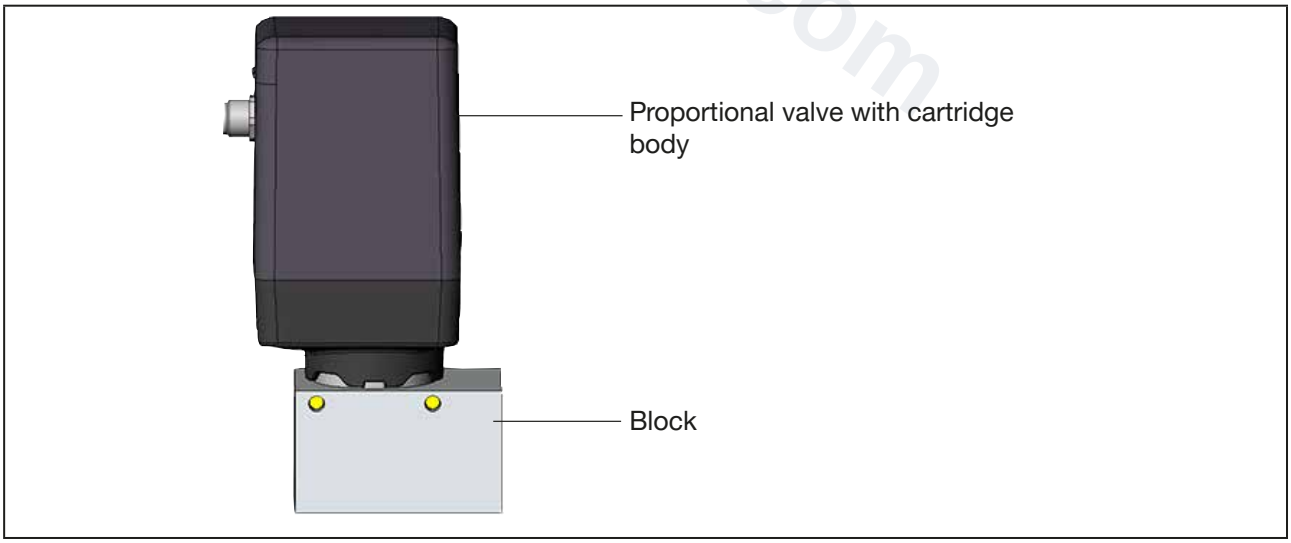



*Fig. 13: Installed proportional valve with cartridge body*

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com

## 7.2 Installing device electrically

None of the electrical inputs and outputs of the device are galvanically isolated from the supply voltage.

**DANGER!**

**Risk of injury due to electrical shock.**

- Before working on the system or device, switch off and isolate the power supply to prevent reactivation of the device.
- Observe applicable accident prevention and safety regulations for electrical equipment.

**NOTE!**

**Damage to the proportional valve due to incorrect supply voltage.**

- The supply voltage must correspond with the voltage indicated on the type label.
- If the ground connection is not connected, the conditions of the EMC Law will not be met.

→ Connect the proportional valve according to the table.
When the supply voltage is applied, the proportional valve is ready for operation.

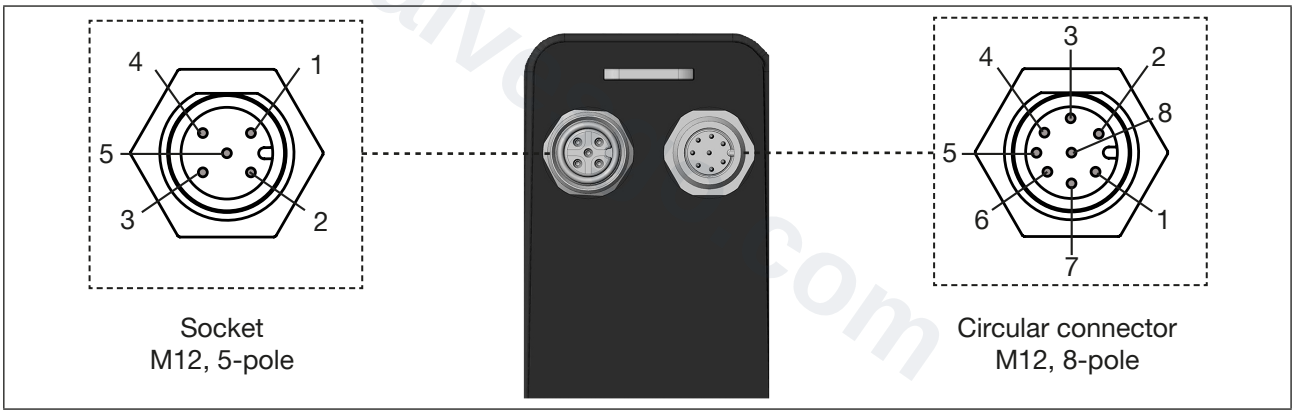



*Fig. 14: Designation of the circular connector, analog version*

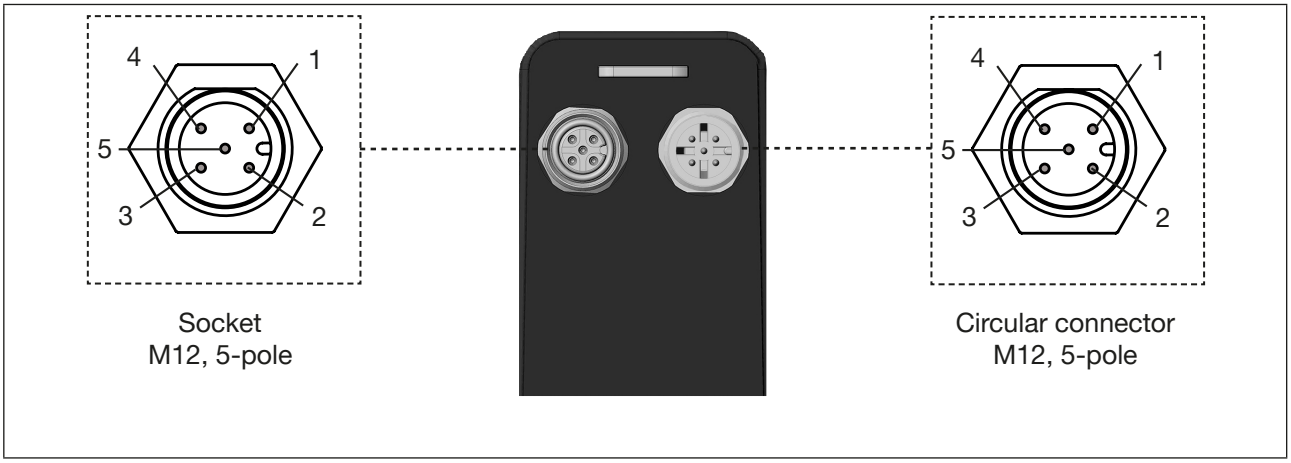



*Fig. 15: Designation of the circular connector, digital version*


MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com

The threaded sleeve of the M12 circular connector is connected to the valve body. Connect the body to a suitable ground connection. To ensure electromagnetic compatibility (EMC), ensure that the cable is as short as possible and the cross-section is as large as possible.


### 7.2.1 Pin assignment for the on-off valve, circular connector M12, 8-pole

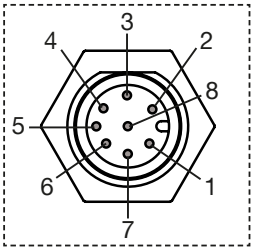


| Pin | Wire colors* | Configuration | External circuit |
|---|---|---|---|
| 1 | white | Supply + | 24 V DC ±10 %, max. residual ripple 10 % |
| 2 | brown | Supply GND | 24 V DC GND |
| 3 | green | do not connect! | Electrically insulate wire on connection line |
| 4 | yellow | do not connect! | Electrically insulate wire on connection line |
| 5 | grey | do not connect! | Electrically insulate wire on connection line |
| 6 | rose | Digital input + | 0...5 V (log. 0), 10...30 V (log. 1), not galvanically isolated |
| 7 | blue | Digital output | 0...5 V (log. 0), 10...30 V (log. 1), not galvanically isolated |
| 8 | red | Signal GND | Signal GND |
| Body | | Shielding | - |

** The indicated wire colors refer to the connection cable, order no. 919061, available as an accessory.*

### 7.2.2 Pin assignment for the control valve, circular connector M12, 8-pole

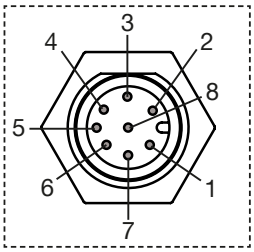


| Pin | Wire colors* | Configuration | External circuit |
|---|---|---|---|
| 1 | white | Supply + | 24 V DC ±10 %, max. residual ripple 10 % |
| 2 | brown | Supply GND | 24 V DC GND |
| 3 | green | do not connect! | Electrically insulate wire on connection line |
| 4 | yellow | do not connect! | Electrically insulate wire on connection line |
| 5 | grey | do not connect! | Electrically insulate wire on connection line |
| 6 | rose | Set-point value input + | 4...20 mA / 0...10 V, not galvanically isolated<br>PWM-signal (800 Hz) |
| 7 | blue | Digital output | 0...5 V (log. 0), 10...30 V (log. 1), not galvanically isolated |
| 8 | red | Signal GND | Signal GND |
| Body | | Shielding | - |

** The indicated wire colors refer to the connection cable, order no. 919061, available as an accessory.*


MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com

## 7.2.3 Pin assignment for the positioner

### 7.2.3.1 Analog version, circular connector M12, 8-pole

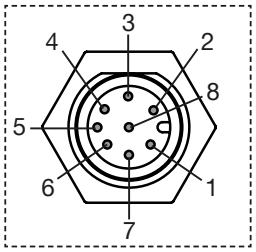



| Pin | Wire colors* | Configuration | External circuit |
|---|---|---|---|
| 1 | white | Supply + | 24 V DC ±10 %,<br>max. residual ripple 10 % |
| 2 | brown | Supply GND | 24 V DC GND |
| 3 | green | CAN low | CAN low** |
| 4 | yellow | CAN high | CAN high** |
| 5 | grey | CAN GND | CAN GND** |
| 6 | rose | Set-point value input + | 0...20 mA / 4...20 mA / 0...5 V / 0...10 V,<br>not galvanically isolated,<br>PWM-signal (800 Hz) |
| 7 | blue | Actual value output | 0...20 mA / 4...20 mA / 0...5 V / 0...10 V,<br>not galvanically isolated |
| 8 | red | Signal GND | Signal GND |
| Body | | Shielding | - |

** The indicated wire colors refer to the connection cable, order no. 919061, available as an accessory.*

*** 3.3 V signal voltage, reliable communication decreases as the line length and transfer rate increases.*

### 7.2.3.2 Digital version, circular connector M12, 5-pole

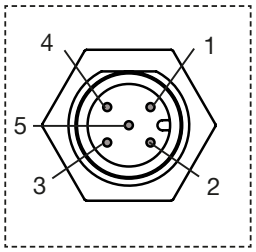


| Pin | Wire colors* | Configuration | External circuit |
|---|---|---|---|
| 1 | | Shielding | |
| 2 | red | Supply + | 24 V DC ±10 %,<br>max. residual ripple 10 % |
| 3 | black | GND | GND |
| 4 | white | CAN high | CAN high |
| 5 | blue | CAN low | CAN low |

** The indicated wire colors refer to the büS cables which are available as accessories.*


MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com

## 7.2.4 Pin assignment for process controller

### 7.2.4.1 Analog version, circular connector M12, 8-pole

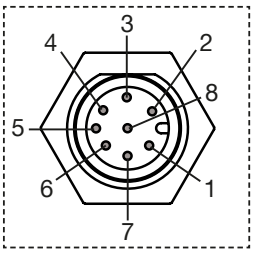



| Pin | Wire colors* | Configuration | External circuit |
|---|---|---|---|
| 1 | white | Supply + | 24 V DC ±10 %, max. residual ripple 10 % |
| 2 | brown | Supply GND | 24 V DC GND |
| 3 | green | CAN low | CAN low** |
| 4 | yellow | CAN high | CAN high** |
| 5 | grey | CAN GND | CAN GND** |
| 6 | rose | Set-point value input + | 0...20 mA / 4...20 mA / 0...5 V / 0...10 V, not galvanically isolated, PWM-signal (800 Hz) |
| 7 | blue | Actual value output | 0...20 mA / 4...20 mA / 0...5 V / 0...10 V, not galvanically isolated |
| 8 | red | Signal GND | Signal GND |
| Body | | Shielding | - |

** The indicated wire colors refer to the connection cable, order no. 919061, available as an accessory.*

*** 3.3 V signal voltage, reliable communication decreases as the line length and transfer rate increases.*

### 7.2.4.2 Analog version, socket M12, 5-pole

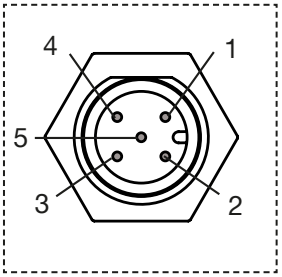


| Pin | Wire colors* | Configuration | External circuit |
|---|---|---|---|
| 1 | brown | Sensor supply + | 24 V DC ±10 %, max. residual ripple 10 % |
| 2 | white | Actual value input sensor + | 0...20 mA / 4...20 mA / 0...5 V / 0...10 V |
| 3 | blue | GND | GND |
| 4 | black | GND | GND (Bridge to GND Pin 3) |
| 5 | grey | Not assigned | Not assigned |
| Body | | Shielding | - |


** The indicated wire colors refer to the connection cable, order no. 559177, available as an accessory.*

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com


### 7.2.4.3 Digital version, circular connector M12, 5-pole

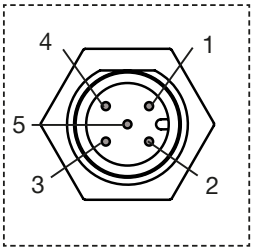


| Pin | Wire colors* | Configuration | External circuit |
|---|---|---|---|
| 1 | | Shielding | |
| 2 | red | Supply + | 24 V DC ±10 %,<br>max. residual ripple 10 % |
| 3 | black | GND | GND |
| 4 | white | CAN high | CAN high |
| 5 | blue | CAN low | CAN low |

** The indicated wire colors refer to the büS cables which are available as accessories.*

### 7.2.4.4 Digital version, socket M12, 5-pole

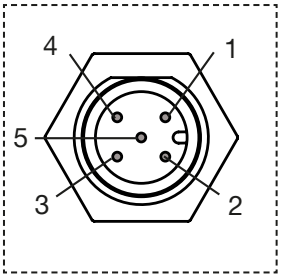


| Pin | Wire colors* | Configuration | External circuit |
|---|---|---|---|
| 1 | brown | Sensor supply + | 24 V DC ±10 %,<br>max. residual ripple 10 % |
| 2 | white | Actual value input sensor +** | 0...20 mA / 4...20 mA / 0...5 V / 0...10 V / Frequency (Pulse +) |
| 3 | blue | GND | GND |
| 4 | black | GND | GND (Bridge to GND Pin 3) |
| 5 | grey | Not assigned | Not assigned |
| Body | | Shielding | - |

** The indicated wire colors refer to the connection cable, order no. 559177, available as an accessory.*

*** A PNP sensor must be used.*

## 7.3 DIP switch settings (analog version only)

**DANGER!**

**Risk of injury due to electrical shock.**

- Before opening the actuator cover, switch off and isolate the power supply to prevent reactivation of the device.
- Observe applicable accident prevention and safety regulations for electrical equipment.

Although the factory settings are ideal for most applications, the settings can be adjusted with DIP switches. The DIP switches can be set to “ON” or “OFF” position depending on the factory order code.

The DIP switches are accessible on the electronic PCB by opening the actuator cover.

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com

## 7.3.1 Opening the actuator cover

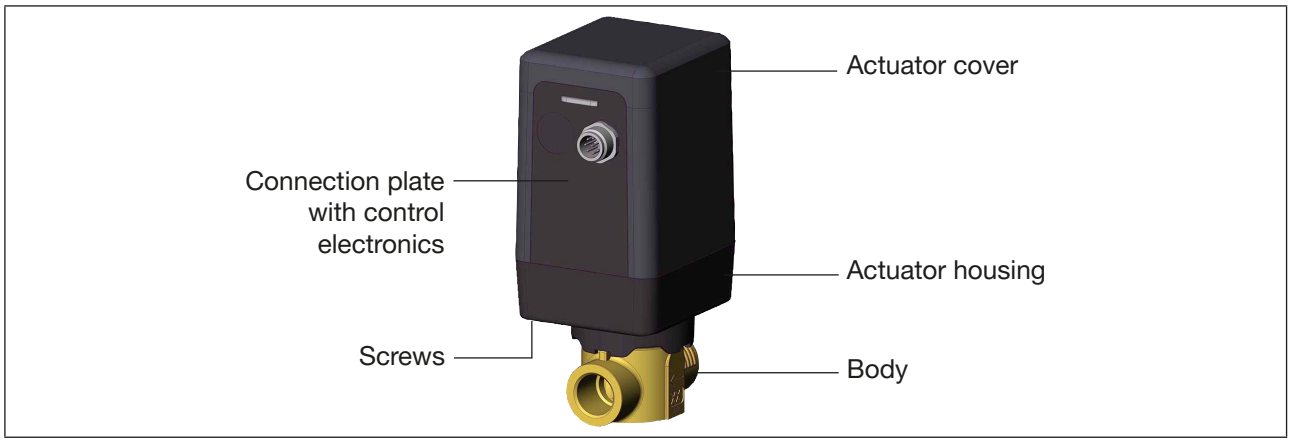



*Fig. 16: Opening the actuator cover, Type 3280*

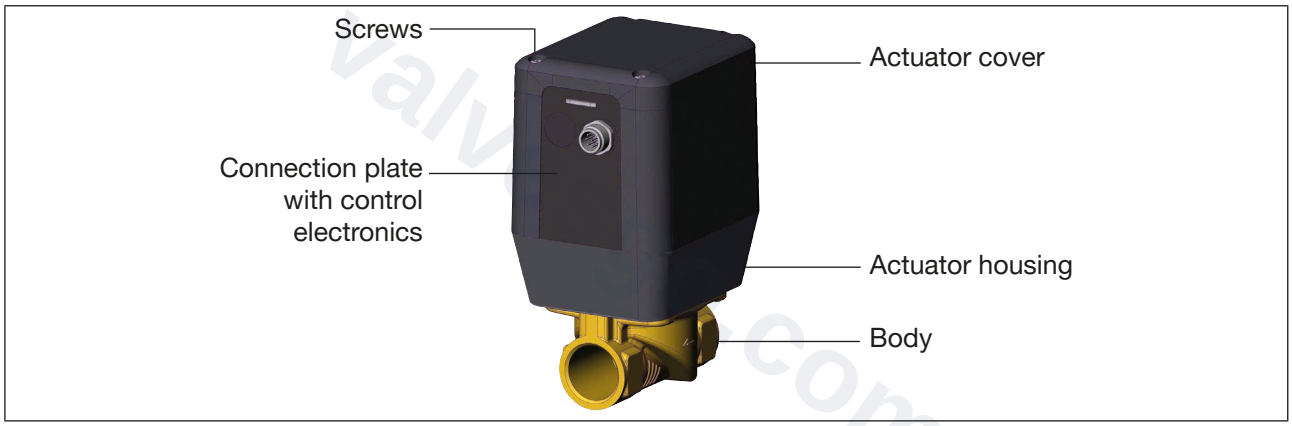



*Fig. 17: Opening the actuator cover, Type 3285*

→ Disconnect the power supply from the device.

→ Carefully loosen the 4 screws on the lower side of the actuator housing, Type 3280, or on the upper side of the actuator cover, Type 3285, using a suitable tool. Do not unscrew the screws completely, as they are designed not to fall out.

**NOTE!**

The connection plate is only plugged in and may fall down when the actuator cover is removed. When removing the cover, hold the connection plate on the plug so that the connection plate remains on the actuator housing and is not removed together with the cover.

→ Secure actuator cover and connection plate with control electronics against falling down and remove the actuator cover.

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com

## 7.3.2 Setting the DIP switch

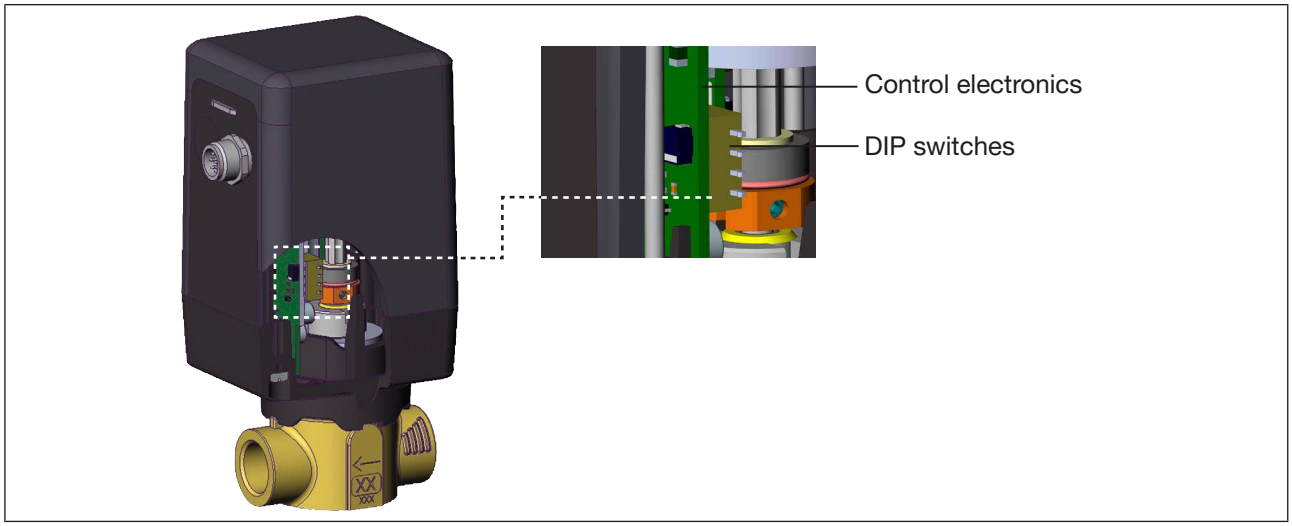



*Fig. 18: Location of the DIP switch, Type 3280*

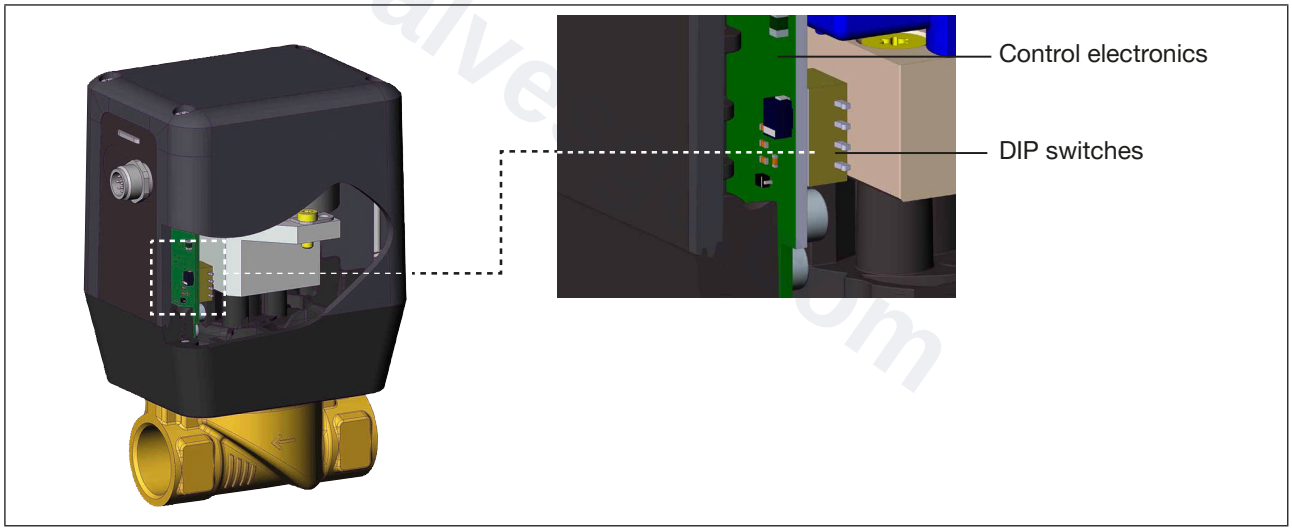



*Fig. 19: Location of the DIP switch for Type 3285*

→ DIP switch, set to “ON” or “OFF” depending on required function. To do this, carefully actuate the particular DIP switch using a suitable tool.

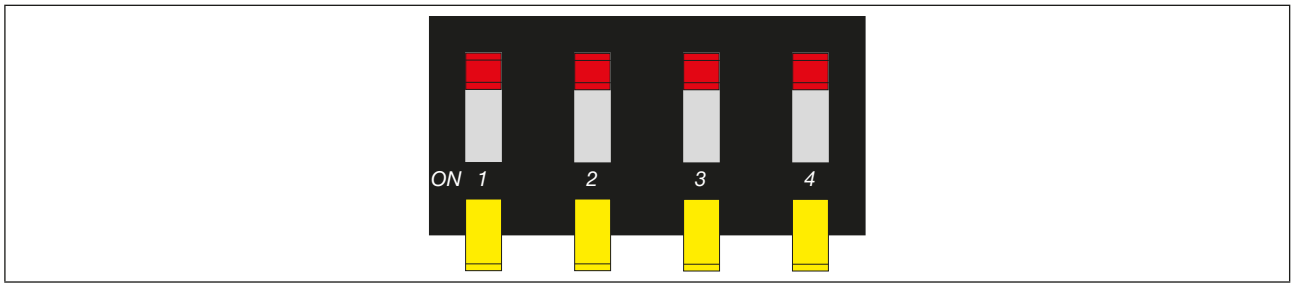



*Fig. 20: DIP switches*

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com

### Description of the function

| DIP switches | Position | Function for the on-off | Function for the control valve | Function for the standard version PWM version | Function for the positioner and process controller version (applies to analog version only) |
|---|---|---|---|---|---|
| 1 | OFF | Normal operating direction of the set-point value 10...30 V = valve opens | Normal operating direction of the set-point value (e.g. set-point value 4...20 mA corresponds to position 0...100 %), increasing | Normal operating direction of the set-point value (PWM duty cycle 0–100 % corresponds to position 0–100 %), increasing | no function |
| | ON | Reversal of the operating direction of the set-point value 10...30 V = valve closes | Reversal of the operating direction of the set-point value (e.g. set-point value 20...4 mA corresponds to position 0...100 %), decreasing | Reversal of the operating direction of the set-point value (PWM duty cycle 0–100 % corresponds to position 0–100 %), decreasing | no function |
| 2 | OFF | no function | Set-point value input 4...20 mA | no function | no function |
| | ON | no function | Set-point value input 0...10 V | no function | no function |
| 3 | OFF | Valve actuating speed: normal mode | Valve actuating speed: normal mode | Valve actuating speed: normal mode | büS |
| | ON | Valve actuating speed: slow mode | Valve actuating speed: slow mode | Valve actuating speed: slow mode | CANopen |
| 4 | OFF | Low power function: off | Low power function: off | Low power function: off | no function |
| | ON | Low power function: on, lower force, less heat generation in the valve | Low power function: on, lower force, less heat generation in the valve | Low power function: on, lower force, less heat generation in the valve | no function |

Whether the device is a PWM version can be found on the type label.

The change in function does not become effective until the supply voltage is applied again.
A more precise description of the functions can be found in chapter “8 Start-up”.

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com

### 7.3.3 Closing the actuator cover

**NOTE!**

**Damage or malfunction due to ingress of dirt and moisture!**

▸ To guarantee protection class IP, ensure that the actuator housing has been installed correctly.

⚠ Do not clamp any loose cables!

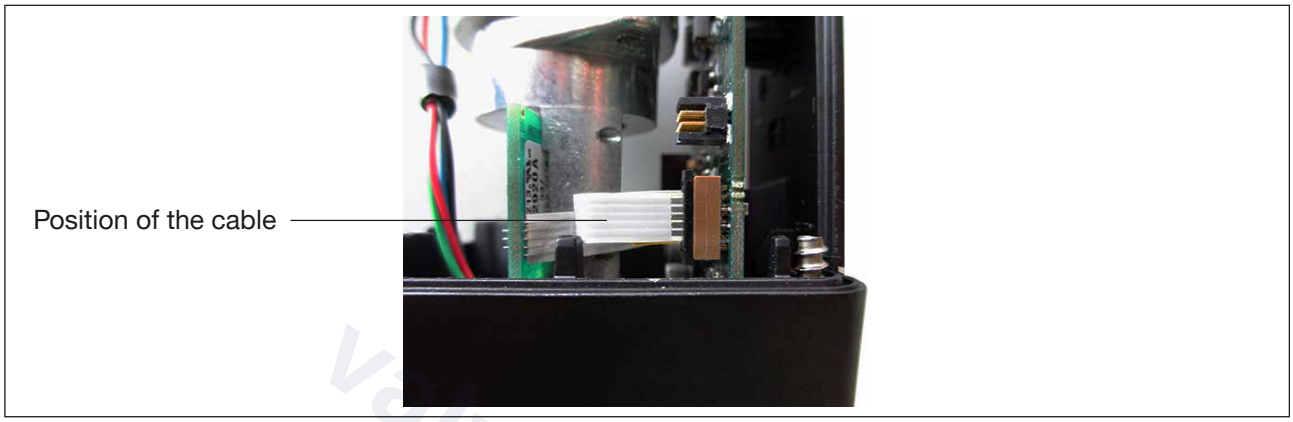



*Fig. 21: Correct position of the cable*

→ Carefully attach actuator cover.

→ Manually insert 4 screws into the designated holes on the lower side of the actuator housing, Type 3280, or on the upper side of the actuator cover, Type 3285, and turn them onto the first thread.

→ Tighten screws (tightening torque: 2 Nm).

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com

## 7.4 Accepting and saving SIM card data (digital version only)

The optionally available SIM card can be used to save and transfer device-specific values and user settings to a different device.

A SIM card which has just been inserted is checked for existing data during device restart. Where applicable, this data is accepted or overwritten:

• The SIM card does not contain any data.
The existing device-specific values and user settings are saved on the SIM card.

• The SIM card contains data which is compatible with the device.
The SIM card data is accepted by the device. The existing device-specific values and user settings are overwritten.

• The SIM card contains data which is not compatible with the device.
The device overwrites the data on the SIM card with its own, device-specific values and user settings.

**NOTE!**

**Do not use any commercially available SIM cards for the device.**
The inserted SIM card is a special industrial version which is particularly durable and temperature-resistant.

▸ Order the SIM card via your Bürkert sales department only.

Inserting the SIM card:

→ Open device (see chapter “7.3”).

→ Carefully push SIM card into the device.

→ Overcome the opposing force of the spring contact and insert all the way. Bürkert lettering on the side facing away from the printed circuit board and beveled side upwards.

→ Close device (see chapter “7.3”).

→ Restart device.
The new data are transferred.

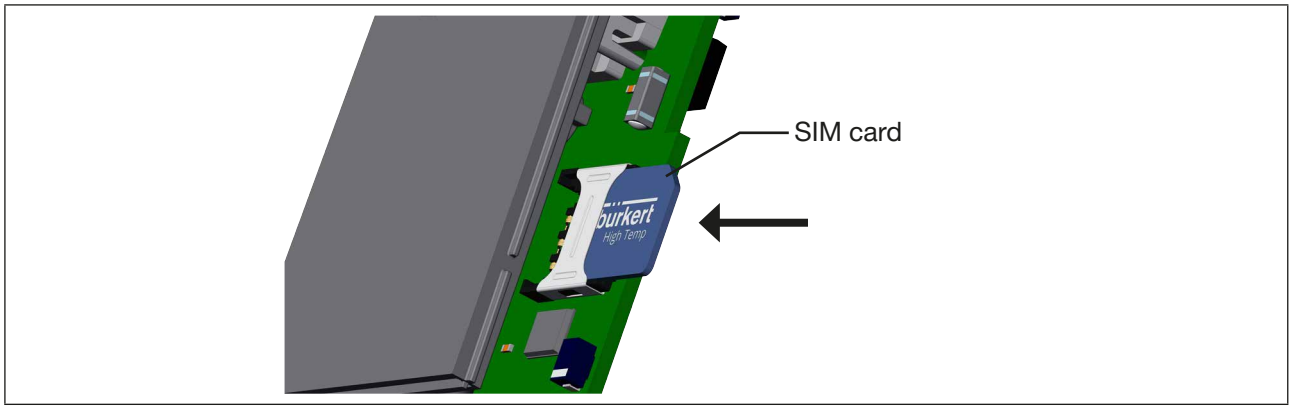



*Fig. 22: Inserting the SIM card*

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com

## 7.5 LED display

With the aid of the positioner version and process controller version, it is possible to use the Bürkert-Communicator Software to toggle the LED colors between standard and NAMUR NE 107.

### 7.5.1 Display elements standard

| LED color | Status | Display |
|---|---|---|
| white | continuously on | Normal operation |
| yellow | continuously on | Valve completely open |
| | flashing, color alternates with the colors of the valve position | Out of specification: Ambient conditions or process conditions for the device are outside the specified area. Internal device diagnostics point to problems in the device or the process properties |
| green | continuously on | Valve closed |
| red | flashing, color alternates with the colors of the valve position | Error<br>see chapter “9.3 Troubleshooting”, page 47 |
| white, green or red | flashing | Is used to identify a device in the büS network. The „flashing“ status is started in the Bürkert Communicator Software when selecting the device |
| orange | flashing, color alternates with the colors of the valve position | Function check: Work is being carried out on the device; controlled operation is therefore temporarily not possible |
| blue | flashing, color alternates with the colors of the valve position | The configuration is not correctly managed by a provider (see Central configuration management of Bürkert devices) |
| no color or LED off | - | Valve without power supply |

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com

## 7.5.2 Display elements NAMUR NE 107

| LED color | Color code | Status | Description | Display |
|---|---|---|---|---|
| green | 1 | continu-ously on | Diagnostics active | Device is operating faultlessly. Status changes are shown in color.<br>Messages are transmitted via any connected field bus. |
| red | 5 | continu-ously on | Failure, error or fault | Due to a malfunction in the device or on its periphery, controlled operation is not possible. |
| green or red | 1 or 5 | flashing | | Is used to identify a device in the büS network. The „flashing“ status is started in the Bürkert Communi-cator Software when selecting the device |
| orange | 4 | continu-ously on | Function check | The device is being worked on; controlled operation is therefore temporarily not possible. |
| yellow | 3 | continu-ously on | Outside the specification | The ambient conditions or process conditions for the device are outside the specified area.<br>Device internal diagnostics point to problems in the device or with the process properties. |
| blue | | flashing | | The configuration is not correctly managed by a pro-vider (see Central configuration management of Bürkert devices) |
| no color or LED off | - | - | - | Valve without power supply |

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026

valvesgo.com



valvesgo.com

# 8 START-UP

**WARNING!**

**Danger due to improper operation.**

Improper operation may result in injuries as well as damage to the device and the area around it.

- The operating personnel must know and have understood the contents of the operating instructions.
- Observe the safety instructions and intended use.
- Only adequately trained personnel may operate the device.

Before start-up, carry out fluid and electrical installation of the valve.

Proportional valve Type 3280 and 3285 has different functions which can be configured and parametrized via the DIP switches.

## 8.1 Functions of the standard device

The following basic functions can be activated or changed via the DIP switches.

| Function | Description |
|---|---|
| Zero point shut-off (not for on-off) | The valve has a zero point shut-off which guarantees that the valve closes tight when input signals are below a threshold of 1 % of the input signal. The valve is closed when values are below this threshold |
| Interruption in the power supply | When the power supply is interrupted, the valve remains in its respective position. When the supply voltage is applied again, the control electronics automatically detect its current valve position and will automatically adjust the valve position if standard signal has changed |
| Digital output | When the valve reaches the closed position, the position can be relayed e.g. to a PLC via the digital output.<br>10 to 30 V = log “1” = valve closed |
| Analog input (set-point value input) (not for on-off) | 0...10 V standard signal or 4...20 mA standard signal, see chapter “7.3”. With a set-point value input of 4...20 mA, the valve stops in the current position and the LED flashes red (signal error detection) if the value of the input signal falls below 4 mA |
| Digital input (set-point value input) (only for on-off) | The digital input is used as a normally closed contact. When 10 - 30 V is applied, the valve opens.<br>0...5 V = log „0“, 10...30 V = log „1“<br>Inverted input correspondingly inverted! |
| Effective direction | The normal effective direction of the set-point value can be set to increasing or decreasing (see chapter “7.3”). If valves are set to increasing, the valve is opened as far as possible with the largest set-point |
| Valve actuating speed | Two valve actuating speeds can be set (see chapter “7.3”). At normal valve speed the proportional valve moves from the closed valve position to the open valve position (0...100 %) in 2.5 s (Type 3280), 4 s (Type 3285). At slow valve speed the proportional valve moves from 0...100 % in 5 s (Type 3280), 10 s (Type 3285) |

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com

| | |
|---|---|
| Low power function | The proportional valve has a low power function which can be adjusted (see chapter “7.3”). When the function is switched on, the proportional is supplied with lower current. The proportional then provides a lower torque; as a result the maximum permitted medium pressure is lower. The function may be used only at very low differential pressures from input to output (max. medium pressure 3 bar, max. differential pressure 1 bar) |

## 8.2 Functions of the positioner and process controller version

Proportional valve Type 3280 and 3285 has different functions, which can be changed via the DIP switches and communications software.

Functions for positioner and process controller:

| Function | Description |
|---|---|
| Zero point shut-off | The valve features a zero point shut-off which ensures sealing of the valve with input signals below a set input signal threshold. The valve is closed when values are below this threshold. See chapter “8.3.1” |
| Interruption in the power supply | When the power supply is interrupted, the valve remains in its respective position. When the supply voltage is applied again, the control electronics automatically detect its current valve position and will automatically adjust the valve position if standard signal has changed |
| Correction characteristic for adapting the operating characteristic | Use this additional function to select a transfer characteristic in relation to the set-point value (set-point position, *CMD*) and the valve stroke *(POS)* for correcting the flow or operating characteristic. See chapter “8.3.1” |
| Insensitivity range | The position controller is only activated once a defined control difference has been achieved. See chapter “8.3.1” |
| Effective direction | Reversal of the effective direction of the set-point value. See chapter “8.3.1” |
| Safety position | Definition of the safety position for set-point value input < 4 mA. See chapter “8.3.1” |
| Value actuating speed | Input of the opening and closing time. See chapter “8.3.1” |
| Limit of the mechanical valve positioning range | The physical positioning range is limited to defined ranges. |
| Simulation | Simulation of set-point values for testing device functions, see description in chapter “8.3.1” |
| Analog input (set-point value input) (analog version only) | 4...20 mA; 0...20 mA; 0...5 V; 0...10 V can be set as standard signals, see chapter “8.3.1” |
| Analog output (actual value output) (analog version only) | 4...20 mA; 0...20 mA; 0...5 V; 0...10 V can be set as standard signals, see chapter “8.3.1” |
| User calibration | Changing the factory calibration of the signal input. See chapter “8.3.1” |
| Energy save function | The proportional valve features a set table energy-saving function. When the energy-saving function is switched on, less current is supplied to the proportional. The proportional then provides a smaller torque, resulting in a reduced max. permissible medium pressure. Only use the energy-saving function with very low differential pressures from On-Closed output (max. medium pressure 3 bar, max. differential pressure 1 bar). See chapter “8.3.1” |

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com

| | |
|---|---|
| Parameterization interface | büS or CANopen can be selected as a parameterization interface. See chapter “7.3” |
| Communications interface | In the case of the digital version, it is possible to communicate with the device via büS/CANopen (e.g. set-point/actual values) |

Functions for process controller only:

| Function | Description |
|---|---|
| Physical scaling of the process variables | Function for scaling process actual value and process set-point value. See chapter „8.3.2“ |
| Process controller optimization | Function for optimizing the process controller parameters. See chapter „8.3.2“ |
| Process characteristic linearization | Function for linearization of the process characteristics. See chapter „8.3.2“ |
| Parameterization of the PID process controller | Setting amplification factor (P-component), reset time (I-component), derivative time (D-component), insensitivity range (dead band), filtering of the process actual value input. See chapter „8.3.2“ |
| Simulation of process values | Simulation of actual values for testing device functions. See chapter „8.3.2“ |
| Analog input (actual value input) | 4...20 mA; 0...20 mA; 0...5 V; 0...10 V can be set as standard signals. See chapter „8.3.2“<br>In the case of the digital version, the actual value input can process not only the standard signals but also frequency signals |

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026

valvesgo.com



valvesgo.com

## 8.3 Setting options

The Bürkert Communicator software enables communication with valves 3280 and 3285.

The operating instructions for the Bürkert Communicator can be found at www.burkert.com.

### 8.3.1 Setting options for running positioner and process controller

*INPUT/OUTPUT*
*Selected standard signal*

Under this menu option, enter the signal used for the set-point value or actual value

- Current 4...20 mA (for digital version only actual value)
- Current 0...20 mA (for digital version only actual value)
- Voltage 0...10 V (for digital version only actual value)
- Voltage 0...5 V (for digital version only actual value)
- CANopen/büS (digital version only)
- Frequency (digital version only)


*SIGNAL.SIM*
*Simulation of the set-point value*

Use this function to simulate the set-point value. The set set-point value source is ignored by the device during simulation. The following types of signal can be entered:

*Sinus* Sine wave



*Square* Square wave






*Triangle* Triangle wave



*Fixed* Manual input of a fixed set-point value

The following parameters can be set for the selected waveform:
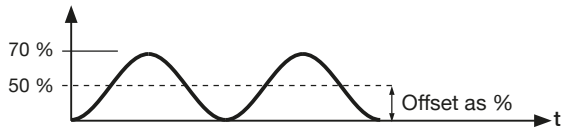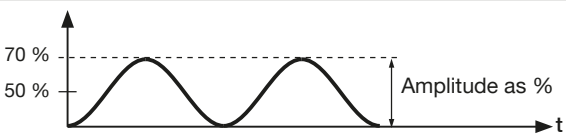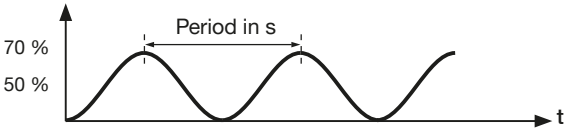
| Menu option | Parameter setting | Schematic representation with sine wave |
|---|---|---|
| *Offset* | (Zero offset as %) |  |
| *Amplitude* | (Amplitude as %) |  |
| *Periode* | (Cycle duration in s) |  |

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com

*X.CONTROL*
***Parameterization of the position controller, insensitivity range (dead band) of the position controller***

Input of the dead band in %, with regard to the scaled stroke/rotation angle range. This function ensures that the controller is only activated once a certain control difference has been achieved.

*X.TIME*
***Limiting the control speed***

Smaller control speeds can be entered in order to limit the control speed. Following settings via the Bürkert-ommunicator are possible:

| Mode | Max. control speed [sec.] |
|---|---|
| Slow 1 | 2.8 |
| Slow 2 | 3.2 |
| Normal | 2.5 |
| Faster | 2.2 |

*DIR.CMD*
***Effective sense or effective direction of the position controller set-point value***

Use this auxiliary function to set the sense of effective direction between the input signal (*INPUT*) and the nominal position (*CMD*) of the actuator.

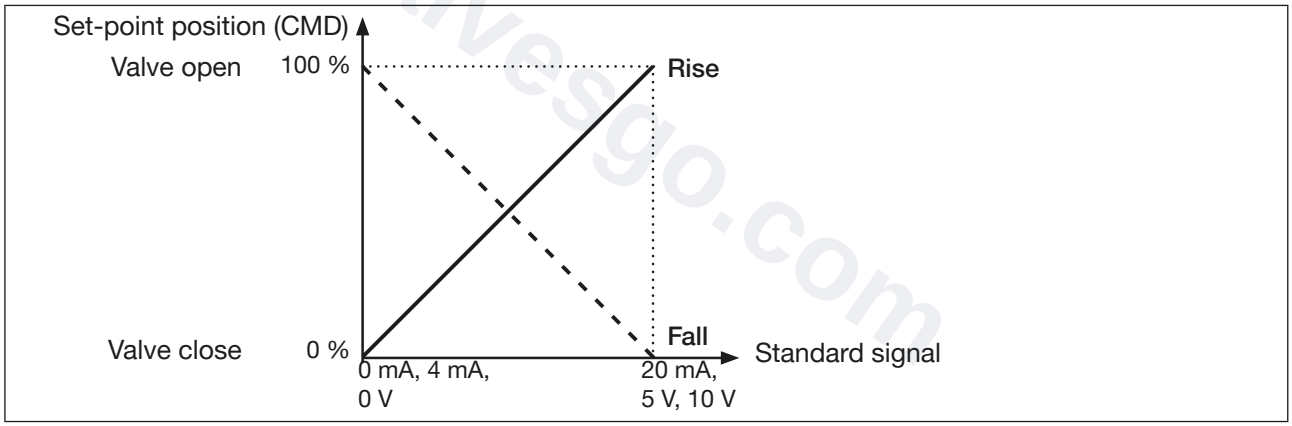



*Fig. 23: Graph of effective direction*

*F.LIMIT*
***Energy-saving function***

The proportional valve features a set table energy-saving function. When the energy-saving function is switched on, less current is supplied to the proportional. The proportional then provides a smaller torque, resulting in a reduced max. permissible medium pressure. Only use the energy-saving function with very low differential pressures from On-Closed output (max. medium pressure 3 bar, max. differential pressure 1 bar).

*SAFEPOS when büS/CANopen*
***Entry of the safety position***

You can input how the actuator is to behave if communications fail. It is possible to move the actuator into any position or to pause it in the current position.

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com

*SAFEPOS when using the energy pack module (capacitive buffer module ID 773 440)*
*Entry of the safety position*

To be able to approach a valve safety position in the event of a power failure, the valve must be energized via the capacitive buffer module. In the event of a power failure, the buffer module provides an output voltage of 18 V DC for several seconds. The reduced input voltage is detected by the valve and the safety position is approached accordingly. It is possible to move the actuator into any position or to pause it in the current position. This Safepos function has the highest priority.

*SAFEPOS when standard signal < 4 mA*
*Entry of the safety position*

At a set-point value input of 4...20 mA, you can input how the actuator is to behave if the input signal drops below 4 mA (signal fault detection). It is possible to move the actuator to the respective end positions or to pause it in the current position.

*X.LIMIT*
*Limits the mechanical valve positioning range*

This function limits the (physical) stroke to specified % values (lower and upper). In doing so, the stroke range of the limited stroke is set equal to 100 %. If the limited stroke range is left during operation, negative actual position or actual position greater than 100 % are indicated.

Factory setting: Lower position limit = 0 %, Upper position limit = 100 %

Adjustment range:
Lower position limit: 0...20 % of the total stroke
Upper position limit: 80...100 % of the total stroke

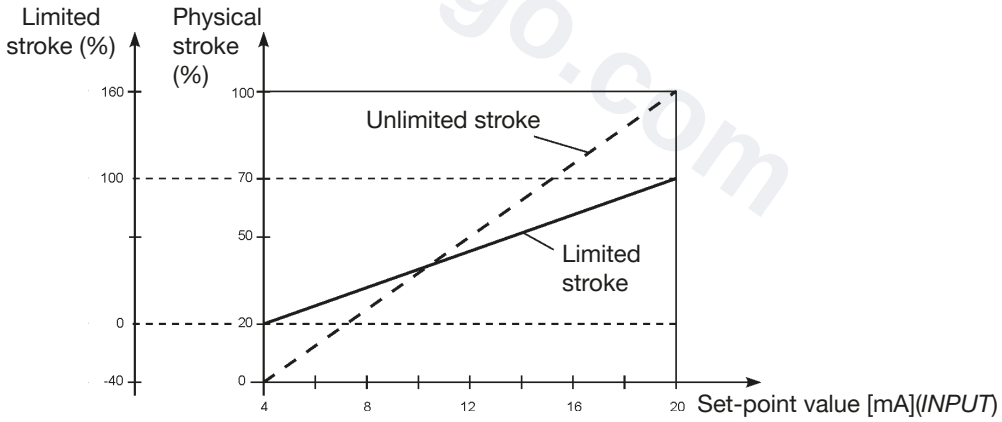



*Fig. 24: Diaphragm X.LIMIT*

*CUTOFF*
*Sealing function for position controller / process controller*

This function causes the valve to be sealed outside the control area. Enter the limits for the position set-point value *(CMD)* or process set-point value after which the actuator is closed fully.

*CHARACT*
*Select the transfer characteristic between input signal (position set-point value) and stroke (correction characteristic)*

Use this auxiliary function to select a transfer characteristic with reference to set-point value (nominal position, *CMD*) and valve position (*POS*) for correction of the flow-rate or operating characteristic.

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com

The flow characteristic $k_V = f(s)$ indicates the flow-rate of a valve, expressed by the $k_V$ value depending on the position/angle s. It is specified by the design of the valve seat and the seat seal. In general two types of flow characteristics are implemented, the linear and the equal percentage.

In the case of linear characteristics identical $k_V$ value changes $k_V$ are assigned to identical stroke changes ds ($dk_v=n_{lin}*ds$). In the case of an equal percentage characteristic an equal percentage change of the $k_V$ value corresponds to a stroke change ds ($dk_v/k_v=n_{eqlprct}*ds$). The operating characteristic $Q = f(s)$ states the correlation between the volume flow Q, which flows through the valve installed in the system, and the position/angle s.

In the case of control tasks for closed-loop control systems it is usually particular demands which are placed on the course of the operating characteristic, e.g. linearity. For this reason it is occasionally necessary to correct the course of the operating characteristic in a suitable way. Equal percentage characteristics 1:25, 1:33, 1:50, 25:1, 33:1 and 50:1 and a linear characteristic can be set. Furthermore, a characteristic can be freely programmed.

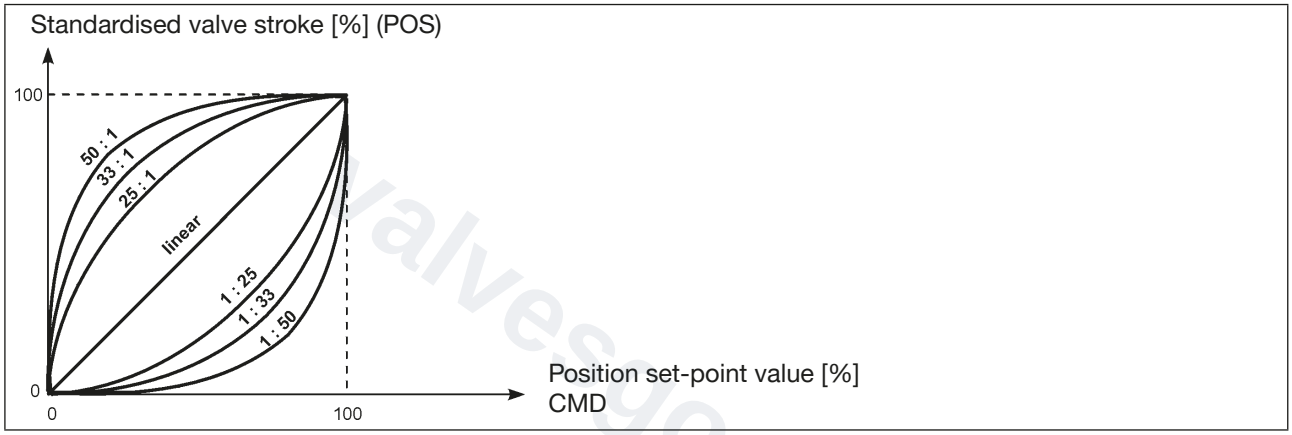



*Fig. 25: Characteristics*

valvesgo.com

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com


## 8.3.2 Setting options for running process controller

***PV.SCALE/SP.SCALE***
***Scaling of the process controller***

The function can be used to specify the following settings:

- Unit of the process actual value
- Position of the decimal point
- Values for the lower and upper process actual value
- Values for the lower and upper process set-point value

Scaling example for the 4...20 mA input
Process actual value from the transmitter: 4...20 mA corresponds to 0...10 l/min
Process set-point value from PLC: 4...20 mA corresponds to 0...8 l/min

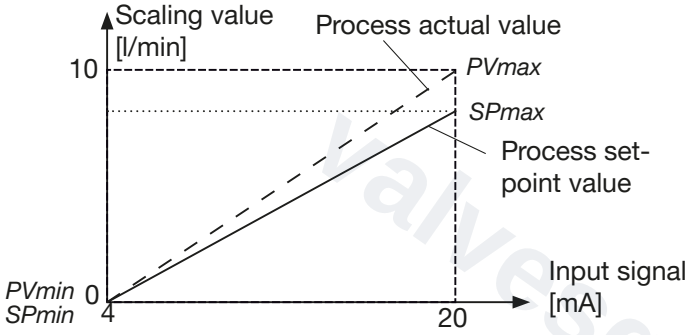


Example for the input of scaling values

| | Version 1 | Version 2 | Version 3 |
|---|---|---|---|
| PVmin | 0 | 0 | 0 |
| PVmax | 1.0 | 10.0 | 100.0 |
| SPmin | 0 | 0 | 0 |
| SPmax | 0.8 | 8.0 | 80.0 |

*Fig. 26: Example of a sensor calibration*

When setting up a process control, observe the following sequence: *P.LIN* → *P.TUNE*

***P.LIN***
***Linearization of the process***

This function can be used to linearize the process characteristic. In doing so, the nodes for the correction characteristic are automatically determined. To do this, the program runs through the valve positioning range in 20 steps and measures the associated process variable.

The correction characteristic and the associated value pairs are saved in the menu item CHARACT → FREE. This is where they can be viewed and freely programmed.

***P.TUNE***
***Self-optimization of the process controller***

To obtain a good control performance, the structure and parameterization of the controller must be adjusted to the properties of the process (control system). This function can be used to parameterize the PID controller integrated in the process controller. In doing so, the parameters for the P, I and D-components of the PID controller are automatically determined and transferred into the corresponding menus from (KP, TN, TV). This is where they can be viewed and changed.

***P.CONTROL***
***Parameterization of the process controller***

- Insensitivity range (dead band).

This function specifies that the process controller will respond from a certain control difference only.

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com

• Amplification factor of the process controller.
The amplification factor determines the P-component of the PID controller.

• Reset time of the process controller.
The reset time determines the I-component of the PID controller.

• Derivative time of the process controller.
The derivative time determines the D-component of the PID controller.

• Filtering of the process actual value input.
The filter of the input signal has a low-pass performance and can be adjusted in several stages.

Setting of the filter effect

| Setting | Corresponds to cut-off frequency (Hz) | Effect |
|---|---|---|
| 0 | 10 | Lowest filter effect |
| 1 | 5 | |
| 2 | 2 | |
| 3 | 1 | |
| 4 | 0.5 | |
| 5 | 0.2 | |
| 6 | 0.1 | |
| 7 | 0.07 | |
| 8 | 0.05 | |
| 9 | 0.03 | Largest filter effect |

***P.SIM***
***Simulation of the process***

This function can be used to simulate the process. The following parameters can be set:

| | |
|---|---|
| *SIM.Gain* | Specify amplification factor |
| *SIM.Delay* | Specify time constant in seconds |

Example of a simulated process:

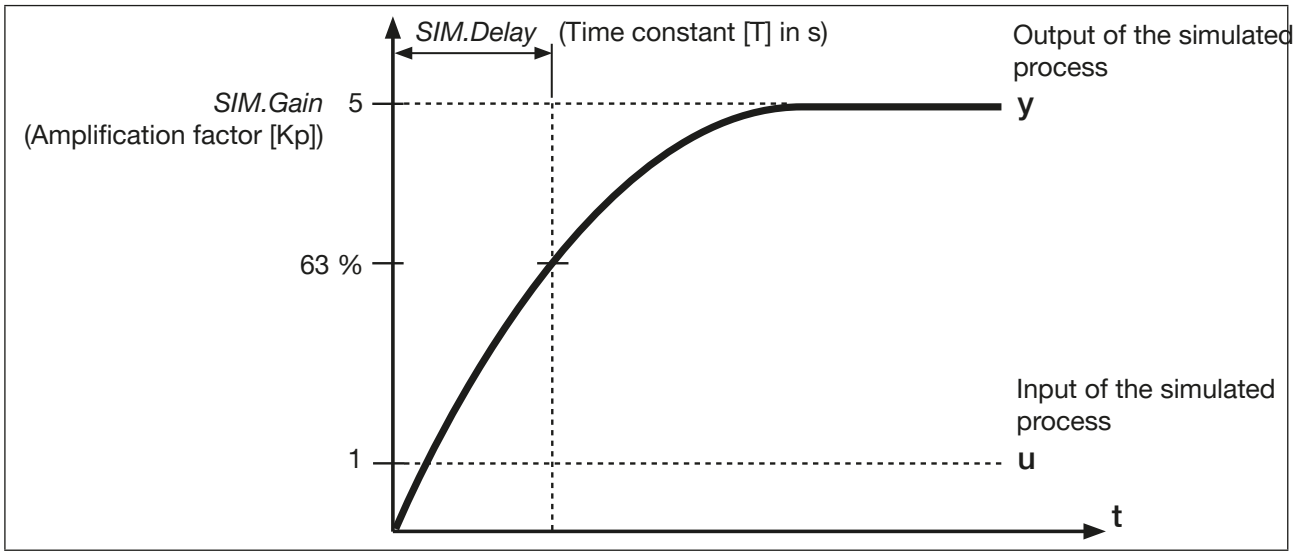



*Fig. 27: Example of a simulated process. Performance of the PT1 element*

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com

### 8.3.3 Other settings

*CAL INP*
***Calibration of the position set-point value (4...20 mA; 0...20 mA; 0...5 V; 0...10 V)***

The set-point value input can be re-calibrated using this auxiliary function. Acceptance of the min. input signal (0 mA; 4 mA; 0 V): Create the minimum value of the input signal at the input and confirm it in the software. Acceptance of the max. input signal (20 mA; 5 V; 10 V): Create the maximum value of the input signal at the input and confirm it in the software.

***Calibration of the position actual value (4...20 mA; 0...20 mA; 0...5 V; 0...10 V)***

This additional function can be used to recalibrate the actual input. Acceptance of the minimum input signal (0 mA; 4 mA; 0 V): Set the minimum value of the unit signal at the input and confirm value in the software. Acceptance of the maximum input signal (20 mA; 5 V; 10 V): Set the maximum value of the unit signal at the input and confirm value in the software.

*FACTORY RESET*
***Reset to the factory settings***

Use this function to reset all user settings to the delivery status. All parameters, except for the calibration values, are reset to default values. The hardware is subsequently reset.

*DIAGNOSIS*

Errors can be read via this function.

*TOGGLE LED DISPLAY*
***Toggle the LED colors between standard and NAMUR NE 107***

Use this function to toggle the colors for displaying the device status between standard and NAMUR NE 107.

## 8.4 Configuration management

The central configuration management makes the rapid replacement of Bürkert devices possible with no configuration effort.

The central configuration management comprises a configuration provider which reads the configuration from the configuration client and saves it centrally.

The configuration client settings are available in the following menu:

Menu: General settings → Parameters detailed viewed → Configuration Client

Further information on the Configuration Client is described in the Software manual under www.burkert.com → Central configuration management of Bürkert devices.

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com

# 9 MAINTENANCE, TROUBLESHOOTING

**DANGER!**

**Risk of injury from high pressure in the system or device.**

- Before working on the system or device, cut off the pressure and deaerate/drain lines.

**Risk of injury due to electrical shock.**

- Before working on the system or device, switch off and isolate the power supply to prevent reactivation of the device.
- Observe applicable accident prevention and safety regulations for electrical equipment.

**WARNING!**

**Risk of injury from improper maintenance work.**

- Maintenance may be carried out only by trained technicians and with the appropriate tools!
- Secure system against unintentional activation.
- Following maintenance, ensure a controlled restart.

## 9.1 Maintenance

The proportional valve Type 3280 and 3285 is maintenance-free under normal conditions.

## 9.2 Cleaning

Use the normal cleaning agents to clean the Type 3280 and 3285. Use no alkaline cleansing agents, as these have a damaging effect on the materials used.

## 9.3 Troubleshooting

In malfunctions occur, check:

- the port connectors,
- whether the operating pressure is within the permitted range,
- the power supply and the standard signals.

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026

valvesgo.com



valvesgo.com

| Problem | Possible cause | Remedial action |
|---|---|---|
| LED is not lit | No power supply | Check the electrical connections |
| LED flashes sporadically white | The power supply collapses periodically - device software reboots each time | Select power supply with adequate power<br>Check cable for possible lose connections |
| LED flashes red / LED illuminates red | The residual ripple of the supply voltage is too high | Use power supply with a smooth output voltage at the required power<br>After eliminating the fault, restart the device for normal operating (isolate from power supply) |
| | Temperature too high | Observe max. ambient temperature / medium temperature; if required reduce duty cycle (see derating curve)<br>When activating standard:<br>After eliminating the fault to cancel the red flashing LED, restart the device (isolate from power supply)<br>When activating position controller and process controller:<br>If the device temperature drops below the set limit after cooling, the fault is automatically deleted by the device |
| | Standard signal is < 4 mA; cable break | Check cable for possible lose connections |
| | Fault with position measuring system | Check cables in the device for possible loose connections |
| | Communications failure büS/CANopen | Check cables for possible loose connections |
| No flow rate available | The set-point value is below the limit for the zero point shut-off | Increase set-point value |
| Valve opens even though it should close | Operating direction of the set-point value has been set incorrectly | Change direction of the set-point |
| Motor is making an unusual droning noise | Gearbox or motor blocked | Return device to the manufacturer to have the fault repaired |
| Valve is not opening / closing correctly | Low power function activated; motor torque for medium pressure too low | Deactivate low power function |
| Valve is not sealed | Dirt between seal and valve seat | Install dirt filter and return device to the manufacturer for cleaning |

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com

# 10 SPARE PARTS

**CAUTION!**

**Risk of injury and/or damage by the use of incorrect parts.**

Incorrect accessories and unsuitable spare parts may cause injuries and damage the device and the surrounding area.

▸ Use original accessories and original spare parts from Bürkert only.

## 10.1 Accessories

Bürkert-Communicator software can be found on the Internet at www.burkert.com

For other accessories see data sheet on the Internet.

valvesgo.com

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com

# 11 PACKAGING AND TRANSPORT

**NOTE!**

**Transport damage.**

Inadequately protected devices may be damaged during transportation.

- Protect the device against moisture and dirt in shock-resistant packaging during transportation.
- Prevent the temperature from exceeding or dropping below the permitted storage temperature.
- Using protective caps, protect the electrical interfaces from damage.

# 12 STORAGE

**NOTE!**

**Incorrect storage may damage the device.**

- Store the device in a dry and dust-free location.
- Storage temperature: –20 °C...+70 °C.

# 13 ENVIRONMENTALLY FRIENDLY DISPOSAL



- Follow national regulations regarding disposal and the environment.
- Collect electrical and electronic devices separately and dispose of them as special waste.

Further information at country.burkert.com

MAN 1000258956 EN Version: L Status: RL (released | freigegeben) printed: 01.11.2026



valvesgo.com