



Tank bottom diaphragm valve with pneumatic actuator in stainless steel (Type ELEMENT) for decentralised automation

- Valve body and diaphragm are available in various materials and variants
- Wetted surfaces from $Ra \leq 0.38 \mu m \dots \leq 1.6 \mu m$ (optionally electropolished)
- Available in all common connection sizes and variants



Product variants described in the data sheet may differ from the product presentation and description.

Can be combined with



Type SV02
Diaphragms



Type 2034
Multifunction block solutions



Type 8691
Control head for decentralised automation of ELEMENT process valves



Type 8692
Digital electropneumatic positioner for integrated mounting on process control valves



Type 8695
Control head for decentralised automation of ELEMENT process valves



Type 8696
Digital electropneumatic positioner for integrated mounting on process control valves



Type 8098
FLOWave SAW flowmeter

Type description

The externally controlled diaphragm valve Type 2105 consists of a pneumatically operated piston actuator, a diaphragm and a tank bottom valve body. The proven and robust actuator with stainless steel housing ensures use in hygienic or aggressive ambient conditions. The flow-efficient valve bodies with little dead space enable high flow rates and a wide range of possible uses. The valve body and the diaphragm are available in all common materials and variants. The actuator has a compact, autoclavable design with a large stainless steel housing and gap-free seals. The integration of automation units Type ELEMENT is possible in all configuration levels (can be retrofitted); a fieldbus interface can also be integrated. An explosion-proof ATEX/IECEx device variant is available.

It is a compact, smooth-surfaced and highly integrated system consisting of a valve and an automation unit with integrated pilot air ducts (no intake of ambient air). The add-on body is optionally available in plastic or stainless steel (can be rotated 360°). The valve offers the degrees of protection IP65/67 and NEMA Type 4X and displays high chemical resistance.

Table of contents

1. General technical data	3
2. Control functions	4
3. Approvals and conformities	5
3.1. General notes	5
3.2. Conformity	5
3.3. Standards	5
3.4. Explosion protection	5
3.5. Foods and beverages/Hygiene	5
3.6. Others	6
4. Materials	7
4.1. Bürkert resistApp	7
4.2. Material specifications	7
4.3. Example of available diaphragm materials	8
5. Dimensions	9
5.1. Actuator	9
ELEMENT actuator	9
ELEMENT actuator with tank bottom body	10
ELEMENT actuator with tank bottom body and pneumatic control unit	11
5.2. Tank bottom body with welded connection	13
5.3. Tank bottom body with clamp connection	14
6. Performance specifications	15
6.1. Medium pressure	15
7. Product accessories	16
8. Networking and combination with other Bürkert products	20
8.1. Possible combinations	20
For ELEMENT valve system Type 8802-TC with TopControl	20
For ELEMENT valve system Type 8802-TC with SideControl Remote	21
For ELEMENT valve system Type 8801-TC with control head or pneumatic control unit/position feedback	22
9. Ordering information	23
9.1. Bürkert eShop	23
9.2. Bürkert product filter	23
9.3. Bürkert Product Enquiry Form	23

1. General technical data

Product properties	
Dimensions	Further information can be found in chapter "5. Dimensions" on page 9.
Material	
Block body (VH) ^{1.)}	Stainless steel block material 1.4435 according to DIN EN 10088 and 316L according to ASTM A479 / A479M
Block body (VI) ^{1.)}	Stainless steel block material 1.4435 according to DIN EN 10088 and 316L according to ASME BPE (Table MM- 2.1.1, Ed. 2024) BN2 available on request
Diaphragm	EPDM (AD) ^{1.)} , PTFE/EPDM (EA) ^{1.)} , Advanced PTFE/EPDM (EU) ^{1.)} , laminate of GYLON® and EPDM (ER) ^{1.)}
Actuator	DN 08...65, PPS DN 65...100, stainless steel 1.4308
Actuator casing	DN 08...65, stainless steel 1.4561 (316Ti) DN 65...100, stainless steel 1.4308
Diaphragm size	8...100
Standard surface quality	
Block body (VH/VI) ^{1.)}	Internally electrically polished: Ra ≤ 0.38 µm (NO17) ^{1.)} (ASME BPE SF4 / DIN HE4) (externally Ra ≤ 1.6 µm) Internally mechanically polished: Ra ≤ 0.5 µm (NO14) ^{1.)} (ASME BPE SF1) (externally Ra ≤ 1.6 µm)
Performance data	
Maximum pilot pressure (SF A)	10 bar 7 bar for actuator size 130, 225 See "6.1. Medium pressure" on page 15
Pilot air port	Push-in connector for outer diameter, Ø 6 mm or ¼" (standard), thread G ½"
Medium data	
Operating medium	Neutral gases and liquids, highly purified, sterile, aggressive or abrasive mediums (see resistance chart ►)
Medium temperature	
EPDM (AD) ^{1.)}	- 10 °C...+ 143 °C (steam sterilisation ^{4.)} max. + 150 °C for 60 min)
PTFE/EPDM (EA) ^{1.)}	- 10 °C...+ 130 °C (steam sterilisation ^{4.)} max. + 140 °C for 60 min)
Advanced PTFE/EPDM (EU) ^{1.)}	- 5 °C...+ 143 °C (steam sterilisation ^{4.)} max. + 150 °C for 60 min)
Laminate of GYLON® and EPDM (ER) ^{1.)}	- 5 °C...+ 130 °C (steam sterilisation ^{4.)} max. + 140 °C for 60 min)
Control medium	Neutral gases, air
Product connections	
Port connection ^{2.)}	
Nominal diameter	DN 06...DN 100 (⅛"...4")
Stainless steel body ^{2.)}	
Welded connection ^{2.)}	DIN EN ISO 1127 / ISO 4200 / DIN 11866 series B DIN 11850 - 2 / DIN 11866 series A / DIN EN 10357 series A ASME BPE / DIN 11866 series C
Clamp connection ^{2.)}	DIN 32676 series A (DIN pipe) DIN 32676 series B (ISO pipe) ASME BPE
Environment and installation	
Installation position	See operating manual Type 2105 ►
Ambient temperature	- 10 °C...+ 60 °C ^{3.)} , autoclavable





1.) This information is part of the product key (see "9.3. Bürkert Product Enquiry Form" on page 23).

2.) Other variants are available on request.

3.) For standard variant, variants with higher temperatures possible

4.) Extending the sterilisation time is permitted, but may affect the service life and maintenance intervals.

2. Control functions

Symbol	Description
	Control function A (CF A) Pneumatically operated tank bottom valve Normally closed by spring force
	Control function B (CF B) Pneumatically operated tank bottom valve Normally opened by spring force
	Control function I (CF I) Pneumatically operated tank bottom valve on either side Switching position dependent on external control
3-position actuator	
	Control function A (CF A) Pneumatically operated 2/3-way position valve Bidirectional Normally closed by spring force

DTS 1000450603 EN Version: K Status: RL (released | freigegeben | valide) printed: 08.07.2026

3. Approvals and conformities

3.1. General notes

- The approvals and conformities listed below must be stated when making enquiries. This is the only way to ensure that the product complies with all required specifications.
- Not all available variants can be supplied with the below mentioned approvals or conformities.

3.2. Conformity

In accordance with the Declaration of Conformity, the product is compliant with the EU Directives.

3.3. Standards

The applied standards which are used to demonstrate compliance with the EU Directives are listed in the EU-Type Examination Certificate and/or the EU Declaration of Conformity.

3.4. Explosion protection

Approval




Description

Optional: Explosion protection (valid for the variable code PX51)
As a category 2 device suitable for zone 1/21 and zone 2/22.

ATEX:
EPS 18 ATEX 2 008 X
II 2G Ex h IIC T4...T2 Gb
II 2D Ex h IIC T135 °C...T300 °C Db

IECEx:
IECEx EPS 18.0007X
Ex h IIC T4...T2 Gb
Ex h IIC T135 °C...T300 °C Db

Temperature class	T2	T3	T4
Maximum surface temperature	+ 300 °C	+ 200 °C	+ 135 °C
Ambient temperature	- 40 °C...+ 130 °C	- 40 °C...+ 130 °C	- 40 °C...+ 100 °C
Maximum medium temperature	+ 285 °C	+ 185 °C	+ 125 °C

Note: The ambient and medium temperature range may be limited by non-ex-relevant specifications. Observe the Operating Instructions.

3.5. Foods and beverages/Hygiene

Conformity	Description
	3-A Sanitary Standards Inc. (valid for the variable code PE05) The products comply with 3-A Sanitary Standards Inc (3-A SSI) as per certificate.
FDA	FDA – Code of Federal Regulations The diaphragms made of EPDM (AD), PTFE/EPDM (EA), Advanced PTFE/EPDM (EU) and laminate of GYLON® and EPDM (ER) comply with the Code of Federal Regulations published by the FDA (Food and Drug Administration, USA).
USP	United States Pharmacopeial Convention (USP) The diaphragms made of EPDM (AD), PTFE/EPDM (EA), Advanced PTFE/EPDM (EU) and laminate of GYLON® and EPDM (ER) are tested according to USP Class VI.
	EC Regulation 1935/2004 of the European Parliament and of the Council The diaphragms made of EPDM (AD), PTFE/EPDM (EA), Advanced PTFE/EPDM (EU) and laminate of GYLON® and EPDM (ER) are suitable for use with food and beverages (according to EC Regulation 1935/2004/EC).


3.6. Others

Conformity	Description
TA Luft	Technical instruction on air quality control (valid for the variable code PM01)

DTS 1000450603 EN Version: K Status: RL (released | freigegeben | valide) printed: 08.07.2026

4. Materials

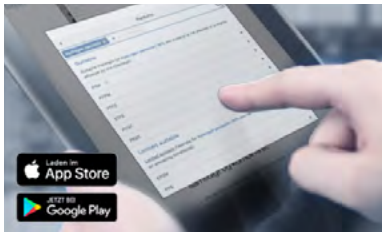4.1. Bürkert resistApp




Bürkert resistApp – Chemical resistance chart

You want to ensure the reliability and durability of the materials in your individual application case? Verify your combination of media and materials on our website or in our resistApp.


[Start chemical resistance check](#)

4.2. Material specifications

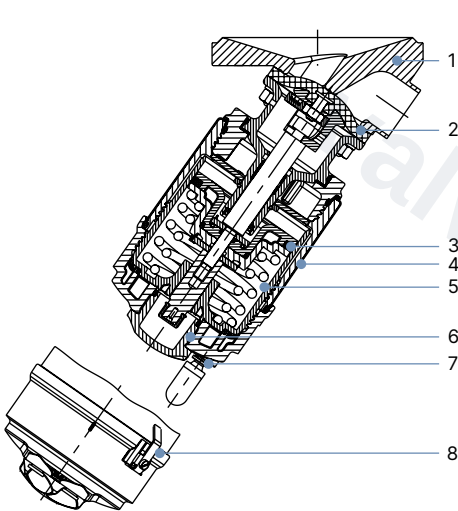Note:
The exemplary representation may differ from the actual product.



No.	Element	Material
1	Valve body	See "1. General technical data" on page 3
2	Diaphragm	EPDM (AD), PTFE/EPDM (EA), advanced PTFE/EPDM (EU), laminate of GYLON® and EPDM (ER)
3	Piston seal	FKM
4	Cover	Stainless steel 1.4561 (316Ti)
5	Actuator	Polyphenylene sulphide PPS
6	Transparent cap	Polysulfone PSU
7	Pilot air ports	Push-in connector PP (standard), Thread G 1/8" stainless steel 1.4305
8	Ground terminal	Stainless steel 1.4301/1.4305 (only for ATEX/IECEx variant)

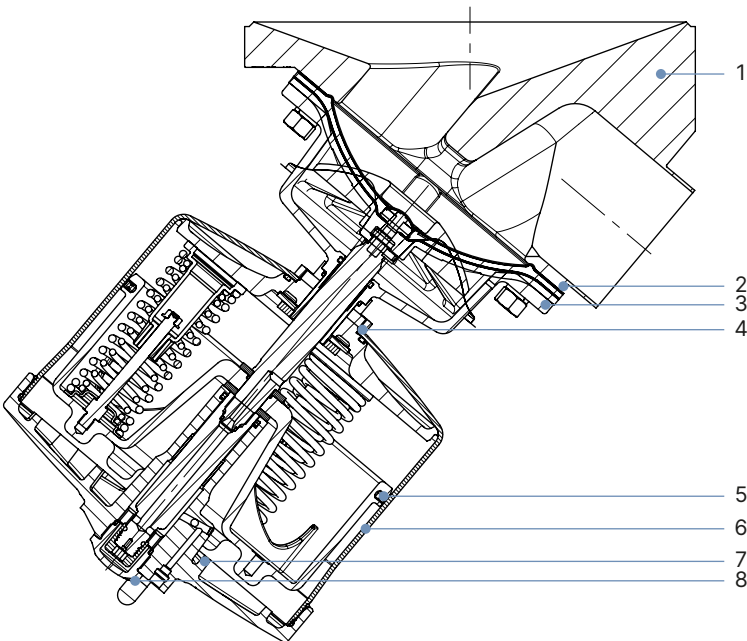

No.	Element	Material
1	Valve body	See "1. General technical data" on page 3
2	Diaphragm	EPDM (AD), PTFE/EPDM (EA), Advanced PTFE/EPDM (EU), Laminate of GYLON® and EPDM (ER)
3	Membransockel	Stainless steel CF3M
4	Nut	Stainless steel 1.4301
5	Piston seal	FKM
6	Liner	Stainless steel 1.4404
7	Drive cover	Stainless steel 1.4308
8	Transparent cap	Polysulfon PSU

4.3. Example of available diaphragm materials

The diaphragms have been developed to meet the unique challenges of hygienic and sterile requirements. Bürkert offers diaphragms with precise material composition and high accuracy. Bürkert diaphragms are available in a wide range of materials which have been tested and proven in applications in the food and beverage, biotechnology, pharmaceutical and cosmetics industries. The diaphragms are tested during development and production to ensure reliability under difficult process conditions.



- EPDM (AD)
- PTFE/EPDM (EA)
- Advanced PTFE/EPDM (EU)
- Laminate of GYLON® and EPDM (ER)

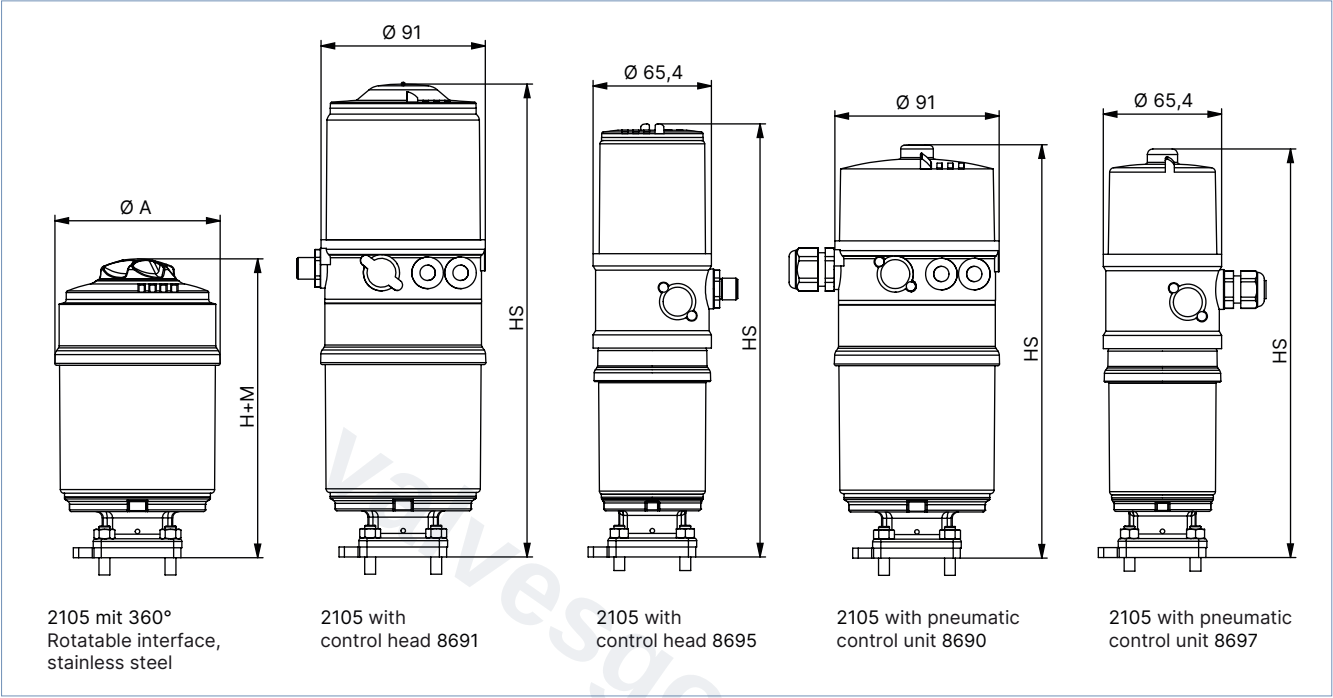
Further information can be found in our flyer "Diaphragm competence for hygienic applications" on our **website** ►.

5. Dimensions

5.1. Actuator

ELEMENT actuator

Note:
Dimensions in mm, unless otherwise stated




Diaphragm size	Actuator size Ø	Ø A	HS with		H+M (MT86)
			8691/8695	8690/8697	
8	50 (D)	65	232	219	138
15	50 (D)	65	240	226	146
	70 (M)	92	262	229	166
20	70 (M)	92	262	229	166
25	70 (M)	92	268	235	172
	90 (N)	120	301	269	205
32	90 (N)	120	313	280	217
40	90 (N)	120	317	285	221
	130 (P)	160	370	337	274
50	130 (P)	160	379	346	282
65	130 (P)	160	383	350	287
65	225 (L)	245	427	395	330
80	225 (L)	245	433	401	336
100	225 (L)	245	429	397	332

DTS 1000450603 EN Version: K Status: RL (released | freigegeben | valide) printed: 08.07.2026

ELEMENT actuator with tank bottom body


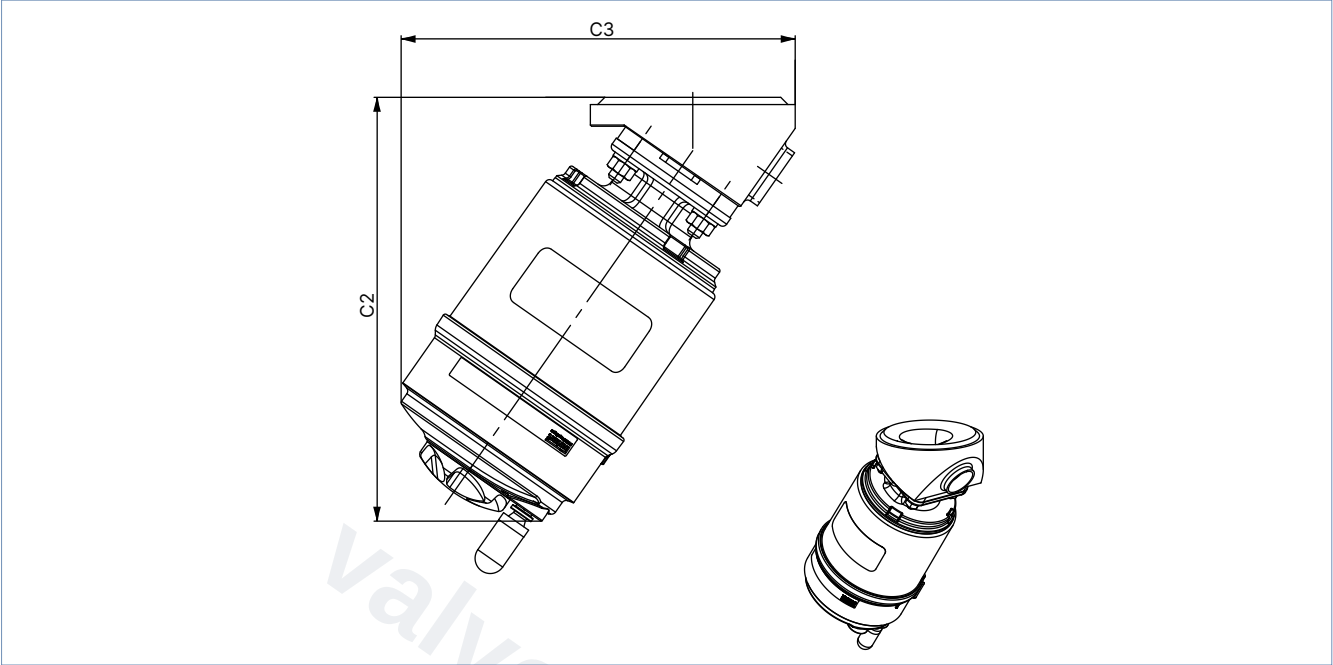
Note:
Dimensions in mm, unless otherwise stated





Diaphragm size	Actuator size Ø	C2	C3
8	50 (D)	139	124
15	50 (D)	152	138
	70 (M)	173	156
20	70 (M)	176	164
25	70 (M)	188	177
	90 (N)	215	201
40	90 (N)	241	238
	130 (P)	290	285
50	130 (P)	302	302
65	130 (P)	314	321
	225 (L)	379	382
80	225 (L)	383	420
100	225 (L)	457	457

ELEMENT actuator with tank bottom body and pneumatic control unit

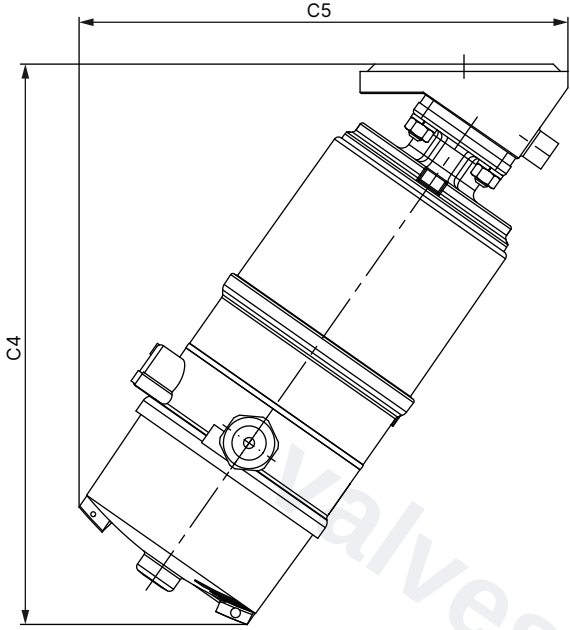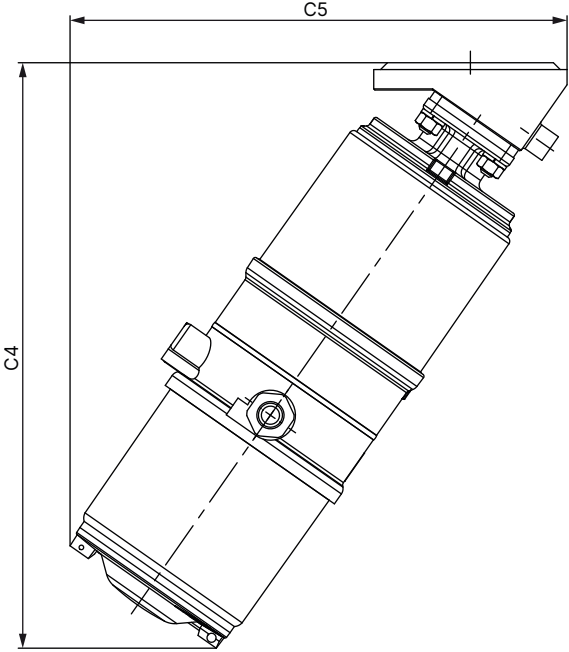Note:
Dimensions in mm, unless otherwise stated


With Type 8690				With Type 8691			
							
Diaphragm size	Actuator size Ø	C4	C5	Diaphragm size	Actuator size Ø	C4	C5
15	70 (M)	229.1	190.3	15	70 (M)	257.4	218.5
20	70 (M)	232.6	207.0	20	70 (M)	260.8	225.7
25	70 (M)	245.5	221.6	25	70 (M)	273.7	240.2
–	90 (N)	272.4	240.2	–	90 (N)	300.7	259.1
40	90 (N)	298.5	278.4	40	90 (N)	326.7	297.0
–	130 (P)	341.0	308.0	–	130 (P)	370.0	327.3
50	130 (P)	354.0	324.3	50	130 (P)	382.2	343.2
65	225 (L)	436.0	389.0	65	225 (L)	436.0	389.0
80		440.0	429.0	80		440.0	429.0
100		466.0	444.0	100		466.0	444.0

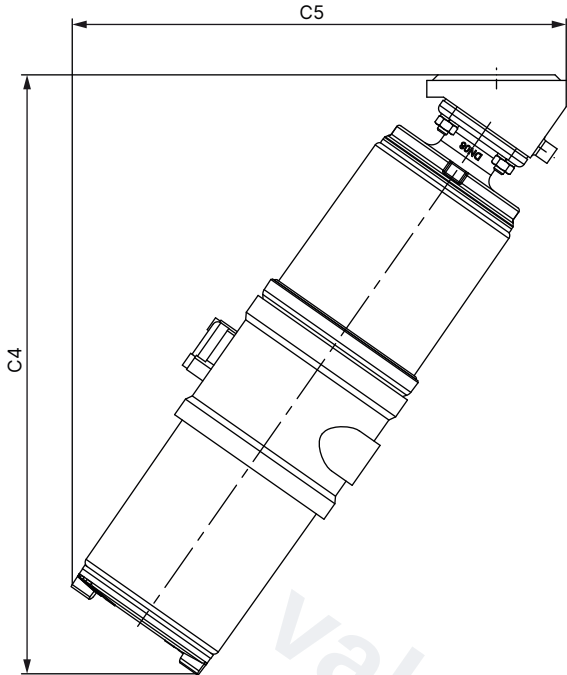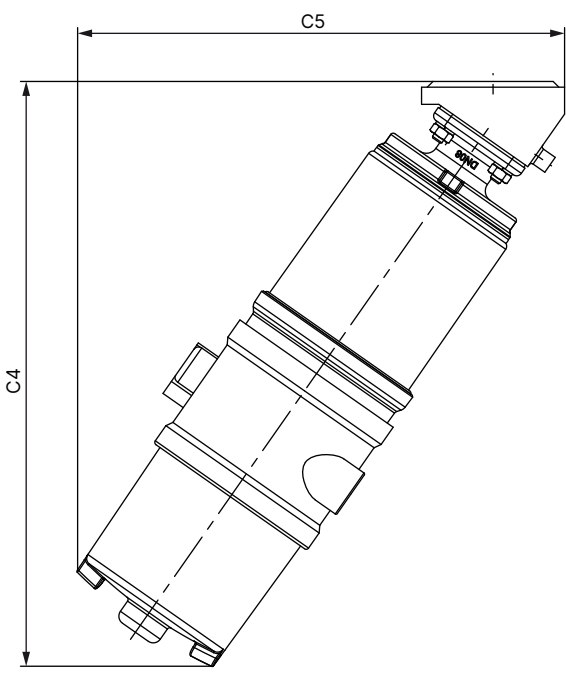With Type 8695				With Type 8697			
							
Diaphragm size	Actuator size Ø	C4	C5	Diaphragm size	Actuator size Ø	C4	C5
8	50 (D)	215.3	177.5	8	50 (D)	204.0	170.3
15	50 (D)	223.2	189.7	15	50 (D)	212.0	182.3

5.2. Tank bottom body with welded connection

Note:

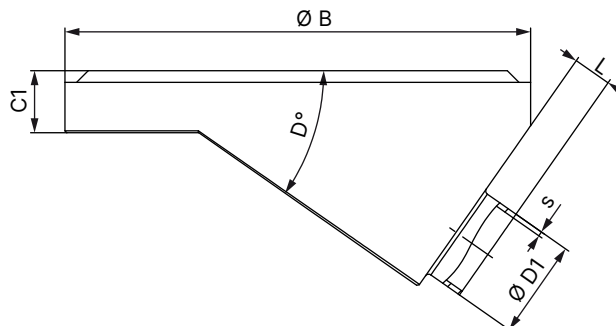Dimensions in mm, unless otherwise stated




Diaphragm size	Port connection DN	Ø B	C1	D	Ø D1	s	L	Product key ¹⁾
DIN EN ISO 1127 / ISO 4200 / DIN 11866 series B								
8	8	50	8	35°	13.5	1.6	5	SA40
15	15	65 (actuator D)	12	35°	21.3	1.6	4	SA42
		85 (actuator M)					8	SA42
20	20	85	12	35°	26.9	1.6	5.6	SA43
25	25	120	16	35°	33.7	2	8	SA44
40	32	150	18	35°	42.4 (Port 32)	2	20	SA45
	40				48.3		15	SA46
50	50	180	22	35°	60.3	2	12	SA47
80	65	225	20	40°	76.1	2	16	SA48
	80				88.9	2.3	10	SA49
100	100	298	30	40°	114.3	2.3	16.5	SA39
DIN 11850 - 2 / DIN 11866 series A / DIN EN 10357 series A								
8	10	50	8	35°	13	1.5	5	SD40
15	15	85	12	35°	19	1.5	8	SD42
20	20	85	12	35°	23	1.5	7	SD43
25	25	120	16	35°	29	1.5	8	SD44
40	40	150	18	35°	41	1.5	20	SD46
50	50	180	22	35°	53	1.5	15	SD47
80	80	225	20	40°	85	2	16	SD49
100	100	298	30	40°	104	2	14	SD50
ASME BPE / DIN 11866 series C								
8	¼"	50	8	35°	6.35	0.89	6	SA90
15	½"	85	12	35°	12.7	1.65	10	SA92
20	¾"	85	12	35°	19.05	1.65	8	SA93
25	1"	120	16	35°	25.4	1.65	12	SODF
40	1½"	150	18	35°	38.1	1.65	15	SODH
50	1½"	180	22	35°	38.1	1.65	25	SODH
	2"				50.8		15	SODI
	2½"				63.5		11	SODJ
80	2½"	225	20	40°	63.5	1.65	25	SODJ
	3"				76.2		16	SODK
100	4"	298	30	40°	101.6	2.11	14	SODL
SMS 3008								
25	25	120	16	35°	25	1.2	8	SA60
40	40	150	18	35°	38	1.2	20	SA62
50	50	180	22	35°	51	1.2	15	SA63

1.) This information is part of the product key (see "9.3. Bürkert Product Enquiry Form" on page 23).

5.3. Tank bottom body with clamp connection

Note:

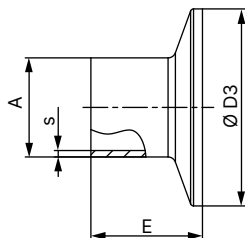- Dimensions in mm, unless otherwise stated
- The clamp dimensions must be added to the welded connection dimensions.



Port connection		A	s	D3	E	Product key ¹⁾
[mm]	[inch]					
DIN 32676 series A (DIN pipe)						
10	–	13	1.5	34.0	18.0	TD41
15	–	19	1.5	34.0	18.0	TD42
20	–	23	1.5	34.0	18.0	TD43
25	–	29	1.5	50.5	21.5	TD44
32	–	35	1.5	50.5	21.5	TD45
40	–	41	1.5	50.5	21.5	TD46
50	–	53	1.5	64.0	21.5	TD47
65	–	70	2.0	91.0	28.0	TD48
80	–	85	2.0	106.0	28.0	TD49
100	–	104	2.0	119.0	28.0	TD50
DIN 32676 series B (ISO pipe)						
8	–	13.5	1.6	25.0	28.6	TC40
8	–	13.5	1.6	34.0 ^{2.)}	28.6	TC51 ^{2.)}
10	–	17.2	1.6	34.0 ^{2.)}	28.6	TC41 ^{2.)}
15	–	21.3	1.6	34.0 ^{2.)}	28.6	TC42 ^{2.)}
15	–	21.3	1.6	50.5	28.6	TC52
20	–	26.9	1.6	50.5	28.6	TC43
25	–	33.7	2.0	50.5	28.6	TC44
32	–	42.4	2.0	50.5 ^{2.)}	28.6	TC45 ^{2.)}
40	–	48.3	2.0	64.0	28.6	TC46
50	–	60.3	2.0	77.5	28.6	TC47
65	–	76.1	2.0	91.0	28.6	TC48
80	–	88.9	2.3	106.0	28.6	TC49
100	–	114.3	2.3	130.0	28.6	TC50
ASME BPE						
8	¼"	6.35	0.89	25.0	28.6	TG50
10	⅜"	9.53	0.89	25.0	28.6	TG01
15	½"	12.7	1.65	25.0	28.6	TG02
20	¾"	19.05	1.65	25.0	28.6	TG03
25	1"	25.4	1.65	50.5	28.6	TG04
40	1½"	38.1	1.65	50.5	28.6	TG05
50	2"	50.8	1.65	64.0	28.6	TG06
65	2½"	63.5	1.65	77.5	28.6	TG07
80	3"	76.2	1.65	91.0	28.6	TG08
100	4"	101.6	2.11	119.0	28.6	TG09

1.) This information is part of the product key (see "9.3. Bürkert Product Enquiry Form" on page 23).

2.) Deviating from standard, as other outer clamp diameter

6. Performance specifications

6.1. Medium pressure

Information for control function A

Note:

- For low operating pressures, optional variants with reduced spring force (EC04) are recommended.
- Pressure data [bar]: Overpressure to atmospheric pressure. Static: When closed, the valve is pressurised on one side with the maximum operating pressure.
- Information for control function B and I is available on request.

Diaphragm size	Actuator size Ø	Pilot pressure	Maximum static operating pressure for seal materials	
			EPDM, FKM	PTFE/EPDM, advanced PTFE/EPDM, laminate of GYLON® and EPDM
	[mm]	[bar]	[bar]	[bar]
8	50 (D)	3.7...10	10	10 ^{1.)}
15	50 (D)	5.0...10	10	–
	70 (M)	4.8...10	10	10
20	70 (M)	4.8...10	10	10
25	70 (M)	5.5...10	10	6
	90 (N)	5.0...10	10	10
40	90 (N)	5.5...10	7.5	6 ^{2.)}
	130 (P)	5.0...7	10	10
50	130 (P)	5.0...7	10	10
65	130 (P)	5.0...7	7.5	5
	225 (L)	2.7...7	10	10
80	225 (L)	5.4...7	10	10
100	225 (L)	5.6...7	10	10 ^{3.)}

1.) Variant is only available with reinforced spring pack

2.) Laminate of GYLON® and EPDM (ER diaphragm) is not available.

3.) The maximum operating pressure for advanced PTFE/EPDM (EU diaphragms) is 9 bar.

7. Product accessories

Electrical position indicator	
Control head	
Type 8691 ▶ Actuator size Ø 70/90/130/225 mm	
	The control heads Type 8691 and Type 8695 are optimised for integrated mounting on process valves of the 21XX series. The valve position is detected without contact via an analogue sensor element. The sensor element automatically detects and stores the valve end positions during commissioning using the teach function. The integrated pilot valve controls single-acting or double-acting actuators. The valve switching status is indicated by coloured high-performance LEDs. Features • Status indication via coloured high-performance LEDs • Wear-free inductive position sensor • Pilot valve with manual override • Teach function for automatic recognition of valve end positions • Hygienic stainless steel design • Easy-to-clean, chemically resistant housing according to IP65/67, 4X rating • AS-Interface, IO-Link, Bürkert system bus (bÜS)
Type 8695 ▶ Actuator size Ø 50 mm	
	Customer benefits • Simple and safe commissioning using the teach function • Easy process monitoring and fault detection through visible coloured high-performance LEDs • High degree of system availability due to increased actuator service life by means of spring chamber ventilation • Minimal space requirement in plant piping for more flexibility in plant design
Pneumatic control unit/position feedback	
Type 8690 ▶ Actuator size Ø 70/90/130/225 mm	
	The pneumatic control units Type 8690 and 8697 are optimised for integrated mounting on process valves of the 21XX series. Mechanical or inductive limit switches detect the valve position. The integrated pilot valve controls single-acting or double-acting (Type 8690) actuators. Features • Optical position indicator • Mechanical or inductive proximity switches for end position detection • Pilot valve with manual override • Compact design • Easy-to-clean, chemically resistant housing according to IP65/67, 4X rating • Optionally intrinsically safe design according to ATEX/IECEx
Type 8697 ▶ Actuator size Ø 50 mm	
	Customer benefits • Simple and safe commissioning using the teach function (Type 8697) • Signal reliability due to the automatic adjustment of the limit switches • Minimal space requirement in plant piping for more flexibility in plant design

Process controller TopControl
Type 8693 ▶ Actuator size Ø 70/90/130/225 mm


The intelligent process controller Type 8693 is designed for integrated mounting on pneumatic actuators from the process control valve series Type 23xx/2103 and especially for the requirements of hygienic process conditions. Using the TUNE functions, the positioner and process controller can be initialised automatically. Easy operation and selection of additional software functions as well as parameterisation are carried out via the large graphic display and a touch keypad. Device configuration and parameterisation can also be conveniently carried out by the Bürkert Communicator software via a PC interface.

Features

- Contactless position sensor
- Universal control system for single and double acting actuators
- Highly dynamic actuating system without internal pilot air consumption in the balanced state
- Integrated diagnostic functions for valve monitoring
- Automatic initialisation of the positioner and process controller using the TUNE function
- Safeguarding in the event of failure of the electrical or pneumatic auxiliary power
- PROFIBUS DPV1, EtherNet/IP, PROFINET, Modbus TCP, Bürkert system bus (bÜS)
- Compact and robust hygienic stainless steel design

Customer benefits

- Quick and easy commissioning
- Intuitive and simple operation via a graphic display with backlight and touch keypad
- High system availability due to increased drive service life by means of spring chamber ventilation
- Guaranteed reliability and predictable maintenance through valve monitoring and diagnostics
- Easy maintenance and process monitoring

Positioner TopControl
Type 8692 ▶ Actuator size Ø 70/90/130/225 mm


The intelligent electropneumatic positioner Type 8692 is designed for integrated attachment to pneumatic actuators of the process control valve series Type 23xx/2103 and especially for the requirements of hygienic process conditions. The positioner can be initialised automatically using the TUNE function. Easy operation and the selection of the extensive additional software functions as well as parameterisation are carried out via the large graphic display and the touch keypad. The device configuration and parameterisation can also be conveniently carried out using the Bürkert Communicator software via a PC interface.

Features

- Contactless position sensor
- Universal positioning system for single and double-acting actuators in the balanced state
- Highly dynamic positioning system without internal pilot air consumption
- Integrated diagnostic functions for valve monitoring
- Automatic initialisation of the positioner by using the TUNE function
- Safeguard in the event of failure of the electrical or pneumatic auxiliary power
- PROFIBUS DPV1, EtherNet/IP, PROFINET, Modbus TCP, Bürkert system bus (bÜS)
- Compact and robust hygienic stainless steel design

Customer benefits

- Quick and easy commissioning
- Intuitive and simple operation via graphic display with backlight and touch keypad
- High system availability due to increased drive service life by means of spring chamber ventilation
- Guaranteed reliability and predictable maintenance through valve monitoring and diagnostics

Positioner TopControl BASIC
Type 8694 ▶ Actuator size Ø 70/90/130/225 mm


The compact positioner Type 8694/8696 is designed for integrated attachment to pneumatic actuators of the Type 23xx/2103 process control valve series and especially for the requirements of hygienic process conditions. Operation and parameterisation are performed via push buttons and DIP switches. The device configuration and parameterisation can also be conveniently carried out using the Bürkert Communicator software via a PC interface.

Features

- Contactless position sensor
- Universal positioning system for single and double-acting actuators
- Ultra dynamic positioning system without internal pilot air consumption
- AS-Interface, IO-Link, Bürkert system bus (bÜS) (only 8694)
- Compact and robust hygienic stainless steel design

Type 8696 ▶ Actuator size Ø 50 mm

Customer benefits

- Simple and safe commissioning using the Teach function
- Minimum space requirement in the plant pipework for more flexibility in plant design
- High system availability due to increased drive service life by means of spring chamber ventilation

Process controller SideControl Remote
Type 8793 ▶ with remote sensor 8798 ▶ Actuator size Ø 70/90/130/225 mm


The intelligent digital positioner and process controller Type 8793 is designed for mounting on lift or swivel drives with standardisation in accordance with IEC 534 - 6 or VDI/VDE 3845 for demanding control tasks. The variant with remote position sensor Type 8798 is used to control Bürkert process control valves. It is operated via a graphic display with backlight. The initialisation of the positioner and process controller can be done automatically using the TUNE function. The type of controlled system is automatically recognised and the appropriate controller structure with the corresponding optimum parameter set is determined.

Features

- Universal control system for single and double acting actuators
- Integrated diagnostic functions for valve monitoring
- Automatic initialisation of the position and process controller using the TUNE function
- Ultra-dynamic actuating system without internal pilot air consumption in controlled state
- Illuminated graphic display with backlight and touch keypad
- PROFIBUS DPV1, EtherNet/IP, PROFINET, Modbus TCP, Bürkert system bus (bÜS)
- Compact and robust design
- Adaptation according to IEC 534 - 6 resp. VDI/VDE 3845 for linear and rotary actuators or as remote variant on Bürkert process valves

Customer benefits

- Quick and easy commissioning
- Intuitive and simple operation via graphic display with backlight and touch keypad
- Guaranteed reliability and scheduled maintenance thanks to valve monitoring and diagnostics
- Easy maintenance and process monitoring
- Long service life

Positioner SideControl Remote
Positioner Type 8792 ▶ with remote sensor Type 8798 ▶ Actuator size Ø 70/90/130/225 mm


The intelligent digital positioner and process controller Type 8792 is designed for attachment to linear and rotary actuators with standardisation according to IEC 534 - 6 or VDI/VDE 3845 for demanding control tasks. The Type 8798 variant with remote position sensor is used to control Bürkert process control valves. It is operated via a graphic display with backlight. The initialisation of the positioner and process controller can be done automatically by using the TUNE function.

Features

- Illuminated graphic display with backlight and touch keypad
- Universal control system for single and double acting actuators
- Ultra-dynamic actuating system without internal pilot air consumption in controlled state
- Integrated diagnostic functions for valve monitoring
- PROFIBUS DPV1, EtherNet/IP, PROFINET, Modbus TCP, Bürkert system bus (bÜS)
- Compact and robust design
- Adaptation according to IEC 534 - 6 resp. VDI/VDE 3845 for linear and rotary actuators or as remote variant on Bürkert process valves

Customer benefits

- Quick and easy commissioning
- Intuitive and simple operation via a graphic display with backlight and touch keypad
- Guaranteed reliability and scheduled maintenance thanks to valve monitoring and diagnostics
- Long service life

Positioner SideControl BASIC Remote
Positioner Type 8791 ▶ with remote sensor Type 8798 ▶ Actuator size Ø 70/90/130/225 mm

**Positioner IP20 Type 8791 ▶
with remote sensor
Type 8798 ▶ Actuator size
Ø 70/90/130/225 mm**


The intelligent digital positioner and process controller Type 8791/8798 is designed for mounting on linear and rotary actuators with standardisation according to IEC 534 - 6 or VDI/VDE 3845 for demanding control tasks. The variant with remote position sensor Type 8798 is used to control Bürkert process control valves. It is operated via a graphic display with backlighting. The positioner and process controller can be initialised automatically using the TUNE functions.

Features

- Simple design
- Universal control system for single and double acting actuators
- Highly dynamic actuating system without internal pilot air consumption in the balanced state
- Adaptation according to IEC 534 - 6 resp. VDI/VDE 3845 for linear and rotary actuators or as remote variant on Bürkert process valves
- AS-Interface, IO-Link, Bürkert system bus (bÜS) (only for positioner Type 8791 BASIC Remote)

Customer benefits

- Simple commissioning
- Simple device for simple control tasks
- Low energy consumption

8. Networking and combination with other Bürkert products

8.1. Possible combinations

For ELEMENT valve system Type 8802-TC with TopControl

Note:
The **continuous ELEMENT valve system Type 8802-TC** consists of a **diaphragm valve Type 2105** and a digital electropneumatic **positioner Type 8692** (for valve actuator size Ø 70/90/130/225 mm), a digital electropneumatic **process controller Type 8693** (for valve actuator size Ø 70/90/130/225 mm), a basic digital electropneumatic **positioner Type 8694** (for valve actuator size Ø 70/90/130/225 mm) or a digital electropneumatic **positioner Type 8696** (for valve actuator size Ø 50 mm).

You order two components and receive a completely assembled and tested valve.

Example:



For ELEMENT valve system Type 8802-TC with SideControl Remote

Note:
The **continuous ELEMENT valve system Type 8802-TC** with **SideControl** consists of a **diaphragm valve Type 2105** and a digital electro-pneumatic **SideControl process controller Type 8793** (for valve actuator size Ø 70/90/130/225 mm) or a digital electropneumatic **SideControl positioner Type 8792/8791** (for valve actuator size Ø 70/90/130/225 mm). The SideControls can only be used in combination with the position measuring system **Type 8798**.

You order two components and receive a completely assembled and tested valve.

Example:



For ELEMENT valve system Type 8801-TC with control head or pneumatic control unit/position feedback

Note:

A decentralized automated **valve system on/off ELEMENT, Type 8801-TC**, consists of a **diaphragm valve, Type 2105** and a valve **control head Type 8691/8695** or a pneumatic **control unit Type 8690/8697**.

You order two components and receive a completely assembled and tested valve.

Example:



DTS 1000450603 EN Version: K Status: RL (released | freigegeben | valide) printed: 08.07.2026

9. Ordering information

9.1. Bürkert eShop



Bürkert eShop – Easy ordering and quick delivery

You want to find your desired Bürkert product or spare part quickly and order directly? Our online shop is available for you 24/7. Sign up and enjoy all the benefits.

[Order online now](#)

9.2. Bürkert product filter



Bürkert product filter – Get quickly to the right product

You want to select products comfortably based on your technical requirements? Use the Bürkert product filter and find suitable articles for your application quickly and easily.

[Try out our product filter](#)

9.3. Bürkert Product Enquiry Form

Note:

Please see our Product Enquiry Form for a full explanation of our specification key.

Bürkert Product Enquiry Form – Your enquiry quickly and compactly

Would you like to make a specific product enquiry based on your technical requirements? Use our Product Enquiry Form for this purpose. There you will find all the relevant information for your Bürkert contact. This will enable us to provide you with the best possible advice.

[Fill out the form now](#)